




**NetApp®**

## OnCommand® Unified Manager

### Performance Advisor Administration Guide

For Use with Core Package 5.2

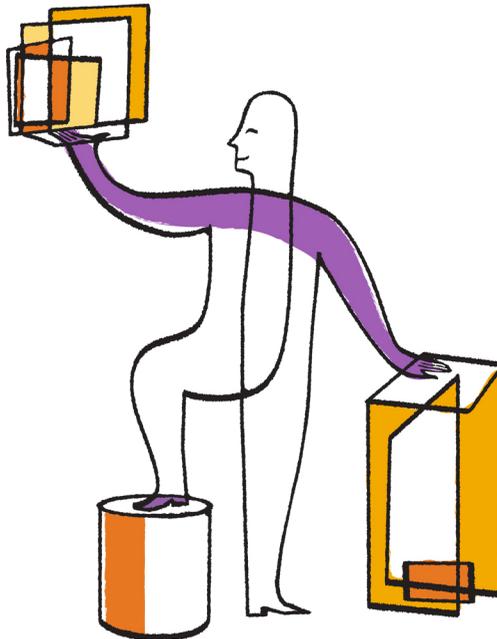

NetApp, Inc.  
495 East Java Drive  
Sunnyvale, CA 94089  
U.S.

Telephone: +1(408) 822-6000  
Fax: +1(408) 822-4501  
Support telephone: +1 (888) 463-8277  
Web: [www.netapp.com](http://www.netapp.com)  
Feedback: [doccomments@netapp.com](mailto:doccomments@netapp.com)

Part number: 215-08130\_A0  
June 2013



# Contents

<b>What Performance Advisor is .....</b>	<b>8</b>
Topology of Performance Advisor .....	8
Performance Advisor topology .....	8
Limitations of Performance Advisor (7-Mode environments only) .....	9
Authentication to access Performance Advisor .....	9
Performance Advisor support for hierarchical groups .....	9
Performance Advisor support for secure connections .....	9
Administrator roles in Performance Advisor .....	10
Performance Advisor support for vFiler units (7-Mode environments only) .....	10
<b>About NetApp Management Console .....</b>	<b>20</b>
What NetApp Management Console is .....	20
Applications and capabilities supported by the NetApp Management Console .....	20
Window layout and navigation .....	21
Window customization .....	22
Data filtering .....	23
<b>Performance objects and counters .....</b>	<b>25</b>
What performance objects are .....	25
List of performance objects (7-Mode environments only) .....	25
List of performance objects (clustered environments only) .....	26
What a performance counter is .....	27
Definitions of performance counters .....	28
List of CLI commands .....	49
<b>What access permission is .....</b>	<b>52</b>
RBAC for configuring views (7-Mode environments only) .....	52
RBAC for modifying storage system settings (7-Mode environments only) .....	52
RBAC for setting thresholds .....	53
RBAC for threshold templates (7-Mode environments only) .....	55
RBAC for configuring events (7-Mode environments only) .....	56
RBAC for configuring alarms (7-Mode environments only) .....	56
<b>Requirements to install Performance Advisor .....</b>	<b>58</b>
Enabling the performance-monitoring server .....	58

Setting up transport protocols between the performance-monitoring server and Performance Advisor .....	58
Setting up appliance-level transport between Performance Advisor and monitored devices .....	59
Setting up transport protocols between Performance Advisor and monitored devices .....	60
<b>Getting started with the Performance Advisor user interface .....</b>	<b>61</b>
Starting Performance Advisor .....	61
Disconnecting from Performance Advisor .....	61
Storage objects unavailable in Performance Advisor .....	61
Unavailable menu options in the Performance Advisor interface .....	62
Zero-value data in a Performance Advisor chart .....	62
Lack of data in a Performance Advisor chart .....	62
Display of new storage objects in Performance Advisor .....	63
<b>Overview of the NetApp Management Console dashboard .....</b>	<b>64</b>
Dashboard panel descriptions .....	64
What events are .....	65
Configuring events .....	65
Monitoring events .....	66
Responding to and acknowledging events .....	67
Deleting events .....	67
<b>Views in Performance Advisor .....</b>	<b>69</b>
What the performance view window is .....	69
What predefined views are .....	69
What custom views are (7-Mode environments only) .....	69
What advanced views are .....	70
Types of data in Performance Advisor .....	71
Logical and physical objects hierarchy .....	71
Viewing historical data .....	71
What synchronizing time axes is .....	72
Viewing historical data .....	72
Displaying tabbed views .....	72
Selecting a performance view .....	73
Closing a performance view .....	73
Actions you can perform in the performance views .....	73
Viewing the time period in a chart .....	74

Resetting both axes .....	74
Synchronizing time axes .....	74
Undoing synchronization of time axes .....	75
How to use the legend for predefined views and custom views .....	75
How to view thresholds .....	75
Creating advanced views .....	75
Adding thresholds using a view .....	76
Changing the chart type .....	76
Pausing data collection .....	76
Printing a chart from a view .....	77
Enabling charts to scale the y axis .....	77
Diagnosing a performance issue (7-Mode environments only) .....	77
Performance monitoring with custom views (7-Mode environments only) .....	78
When must you create a custom view (7-Mode environments only) .....	78
How data from counters is displayed (7-Mode environments only) .....	78
Viewing real time data (7-Mode environments only) .....	78
Creating a custom view (7-Mode environments only) .....	79
Opening a custom view (7-Mode environments only) .....	79
Editing custom views (7-Mode environments only) .....	80
Deleting a custom view (7-Mode environments only) .....	80
CPU utilization limitations on storage systems or vFiler hosts .....	81
Analysis of real-time data (7-Mode environments only) .....	81
Methods for saving performance data .....	81
Saving a chart .....	81
Exporting a view to a .csv file .....	82
Predefined views of logical and physical objects .....	82
Predefined views at the global or group level .....	83
Predefined views at the storage system level (7-Mode environments only) .....	85
Predefined views at the vFiler unit level (7-Mode environments only) .....	90
Predefined views at the processor level .....	91
Predefined views at the network interface level .....	91
Predefined views at the dataset level (7-Mode environments only) .....	92
Predefined views at the resource pool level (7-Mode environments only) ...	92
Predefined views at the volume level .....	93
Predefined views at the qtree level (7-Mode environments only) .....	95

Predefined views at the LUN level .....	96
Predefined views at the aggregate level .....	97
Predefined views at the disk level .....	97
Predefined view at the target level (7-Mode environments only) .....	98
Predefined views at the cluster level (clustered environments only) .....	98
Predefined views at the Vserver level (clustered environments only) .....	99
Predefined views at the node level (clustered environments only) .....	101
<b>Alarms, hosts, and thresholds .....</b>	<b>104</b>
What alarms are .....	104
List of alarm management tasks .....	104
Managing and monitoring alarms .....	105
Monitoring alarms .....	105
Creating alarms .....	106
Editing alarms .....	106
Testing alarms .....	107
Enabling or disabling alarms .....	107
Adding alarms .....	108
Deleting alarms .....	109
Responding to alarms .....	109
Display of storage systems by using Performance Advisor .....	110
Host table field descriptions .....	110
Editing host credentials .....	111
Configuration of data collection .....	112
Copying the data collection configuration (7-Mode environments only) ...	112
Effect of increasing sample rates (7-Mode environments only) .....	112
Setting retention periods and sample rates (7-Mode environments only) ...	113
How thresholds work .....	113
What resource properties are .....	114
Viewing threshold values .....	114
When to use thresholds in combination .....	115
What the Details tab is .....	115
Adding thresholds .....	115
Editing thresholds by using the Summary tab .....	115
Editing thresholds using charts .....	116
Editing thresholds using the Details tab .....	116
Deleting thresholds .....	117

What a threshold template is (7-Mode environments only) .....	117
<b>Glossary .....</b>	<b>119</b>
<b>Copyright information .....</b>	<b>122</b>
<b>Trademark information .....</b>	<b>123</b>
<b>How to send your comments .....</b>	<b>124</b>
<b>Index .....</b>	<b>125</b>

# What Performance Advisor is

---

Performance Advisor is a Java-based client application that runs in the NetApp Management Console and allows you to view comprehensive performance information about storage objects in your environment.

You can use the performance data to perform the following:

- Monitor storage objects for usage levels and optimal functioning, by viewing the data for all the monitored devices discovered by the DataFabric Manager server.
- Identify potential issues in the data infrastructure.
- Perform short-term trend analysis for the data infrastructure.

## Topology of Performance Advisor

The topology of Performance Advisor is designed specifically to help you gather performance data.

### Performance Advisor topology

The Performance Advisor topology includes the NetApp Management Console (which provides the interface to Performance Advisor), the DataFabric Manager server (which includes a *performance-monitoring server*), and one or more storage systems, vFiler units, clusters or Vservers.

Elements in the Performance Advisor interact in the following ways:

- The performance-monitoring server collects and stores performance data from one or more storage systems or vFiler units on the network. The monitoring server is installed and enabled by default as part of the DataFabric Manager server installation.
- Performance Advisor reads the performance data stored on the monitoring server and generates performance-related views and charts. You must install the NetApp Management Console on a separate host (Windows or Linux system) to manage the performance-monitoring server and view performance data.

**Note:** Performance Advisor is available only on the host on which the NetApp Management Console is installed. You cannot view Performance Advisor remotely through a browser.

- The DataFabric Manager server monitors one or more storage nodes, Vservers, storage systems or vFiler units.

## Limitations of Performance Advisor (7-Mode environments only)

Performance Advisor does not collect real-time data for any view that includes a bar graph to minimize CPU utilization.

Although the performance-monitoring server supports simultaneous connections from multiple Performance Advisor instances, connection from many instances of Performance Advisor simultaneously can result in slower collection of data.

## Authentication to access Performance Advisor

The NetApp Management Console platform in which Performance Advisor runs must supply valid user name and password credentials to connect with the performance-monitoring server. The server obtains the user name and the password from the database on the workstation, and validates the credentials with the HTTP or HTTPS authentication mechanisms.

HTTP is the default protocol in 7-Mode environments and HTTPS is the default protocol in clustered environments.

## Performance Advisor support for hierarchical groups

Performance Advisor supports hierarchical groups created on the DataFabric Manager server 3.3 or later, including groups with or without storage objects, groups containing direct storage groups, groups containing subgroups, and the global group.

A group can be one of the following:

- An empty group with no storage objects or subgroups
- A group containing storage objects only, with no subgroups
- A group containing subgroups only, without direct storage objects
- A group containing one or more direct storage objects and one or more subgroups
- The global group

The properties and configurations of this group are applied by default to all of its subgroups.

All the operations that you can perform on the global group are valid for the subgroups too. For example, you can click a subgroup folder to display the Summary View window.

## Performance Advisor support for secure connections

Performance Advisor supports HTTP, SSL and HTTPS connections for the performance-monitoring server, Performance Advisor, and the monitored storage systems, clusters, Vservers, and vFiler hosts.

The DataFabric Manager server generates an SSL certificate for the performance-monitoring server automatically at startup. You do not have to take any action to generate the certificate.

**Note:** If you use HTTPS transport for the connection between the performance-monitoring server and the storage system or vFiler host, it might adversely affect the performance of the storage system. In such cases, you should use HTTP transport only.

## Administrator roles in Performance Advisor

You can use administrator roles such as the GlobalRead, GlobalWrite, GlobalDelete, and GlobalPerfManagement roles to control access to performance data in the DataFabric Manager server.

The administrator roles determine the availability of menu options in Performance Advisor. If the options appear dimmed in the application interface, it indicates that the options are unavailable to you for the selected storage system or vFiler unit.

The following roles help you to work with performance views in the interface:

- The GlobalRead role allows you to view all the performance views.
- The GlobalWrite and GlobalDelete roles allow you to create, edit, and delete custom views within any group.
- The GlobalPerfManagement role allows you to manage views, event thresholds, and alarms, apart from viewing performance information in the application.

You can use this role to work with custom views.

## Performance Advisor support for vFiler units (7-Mode environments only)

Performance Advisor supports the MultiStore feature in DataFabric Manager server 3.3 or later. You can view performance data for the objects in a vFiler unit, such as LUNs, volumes, and qtrees. You can also view physical performance data about the hosting storage system, such as CPU usage.

The vFiler unit counters are displayed for the hosting storage systems running Data ONTAP 7.1 or later.

**Note:** The vFiler unit, All report in Operations Manager console lists your network's vFiler units and their hosting storage systems.

See the *OnCommand Unified Manager Operations Manager Administration Guide* for information about the DataFabric Manager server support for vFiler units.

### Related information

[OnCommand Unified Manager Operations Manager Administration Guide: support.netapp.com/documentation/productsatoz/index.html](http://support.netapp.com/documentation/productsatoz/index.html)

# Understanding information relevant to 7-Mode and clustered environments

---

Because OnCommand Unified Manager supports both clustered Data ONTAP and 7-Mode environments, it is important to identify the information that is relevant to you.

The following labeling guidelines can help you to better understand the content that is provided in the OnCommand Unified Manager documentation:

- (7-Mode environments only)  
Topic titles or information within a topic include this label when the topic or information is applicable to 7-Mode environments only. For example, the title *Adding storage systems (7-Mode environments only)* indicates that this task is relevant for 7-Mode environments only.
- (clustered environments only)  
Topic titles or information within a topic include this label when the topic or information is applicable to the clustered environment only. For example, the title *Adding clusters (clustered environments only)* indicates that this task is relevant for the clustered environment only.
- No mode labels in titles  
Topics that apply to both 7-Mode and clustered environments do not include any labels in the title. For example, the topic *Creating alarms for events* provides information that is relevant to both 7-Mode and clustered environments.
- No mode labels in topic information  
Information within a topic that applies to both 7-Mode and clustered environments does not include any labels.

The documentation includes the following topics to help you navigate to the specific information that you want:

- Each section in the Help includes two topics that provide links to information in that section of the Help, which is relevant to each mode.
- Each product manual includes two topics that provide links to information throughout the manual, which is relevant to each mode.

## 7-Mode environments: List of Performance Advisor tasks and information

Because Unified Manager supports both clustered and 7-Mode environments, it is important to identify the information that relates to your 7-Mode environment.

The following list provides links to all the administration tasks and information related to storage in a 7-Mode environment:

## Performance Advisor

- [What Performance Advisor is](#) on page 8
- [Topology of Performance Advisor](#) on page 8
- [Performance Advisor topology](#) on page 8
- [Limitations of Performance Advisor](#) on page 9
- [Authentication of a Performance Advisor instance](#) on page 9
- [Performance Advisor support for hierarchical groups](#) on page 9
- [Performance Advisor support for secure connections](#) on page 9
- [Administrator roles in Performance Advisor](#) on page 10
- [Performance Advisor support for vFiler units](#) on page 10

## About NetApp Management Console

- [About NetApp Management Console](#) on page 20
- [What NetApp Management Console is](#) on page 20
- [Applications and capabilities supported by the NetApp Management Console](#) on page 20
- [NetApp Management Console window layout and navigation](#) on page 21
- [NetApp Management Console window customization](#) on page 22
- [NetApp Management Console data filtering](#) on page 23

## Performance objects and counters

- [Performance objects and counters](#) on page 25
- [What performance objects are](#) on page 25
- [List of performance objects](#) on page 25
- [What a performance counter is](#) on page 27
- [Definitions of performance counters](#) on page 28
- [List of CLI commands](#) on page 49

## Access permissions for Role Based Access Control

- [What access permission is](#) on page 52
- [RBAC for configuring views](#) on page 52
- [RBAC for modifying storage system settings](#) on page 52
- [RBAC for setting thresholds](#) on page 53
- [RBAC for threshold templates](#) on page 55
- [RBAC for configuring events](#) on page 56
- [RBAC for configuring alarms](#) on page 56

## Performance Advisor setup

- [Performance Advisor and server setup requirements](#) on page 58
- [Enabling the performance-monitoring server](#) on page 58

- [Setting up transport between the performance-monitoring server and Performance Advisor](#) on page 58
- [Setting up transport protocols between Performance Advisor and monitored devices](#) on page 60
- [Setting up appliance-level transport between Performance Advisor and monitored devices](#) on page 59

## Performance Advisor user interface

- [Getting started with the Performance Advisor user interface](#) on page 61
- [Starting Performance Advisor](#) on page 61
- [Disconnecting from Performance Advisor](#) on page 61
- [Storage objects unavailable in Performance Advisor](#) on page 61
- [Unavailable menu options in the Performance Advisor interface](#) on page 62
- [Zero-value data in a Performance Advisor chart](#) on page 62
- [Absence of data in a Performance Advisor chart](#) on page 62
- [Display of new storage systems in Performance Advisor](#) on page 63

## Dashboard and events

- [Overview of the NetApp Management Console dashboard](#) on page 64
- [Dashboard panel descriptions](#) on page 64
- [What events are](#) on page 65
- [How to know when an event occurs](#) on page 65
- [Monitoring events](#) on page 66
- [Responding to and acknowledging events](#) on page 67
- [Deleting events](#) on page 67

## Views

- [Views in Performance Advisor](#) on page 69
- [What the performance view window is](#) on page 69
- [What default views are](#) on page 69
- [What custom views are](#) on page 69
- [What advanced views are](#) on page 70
- [Types of data in Performance Advisor](#) on page 71
- [Logical and physical objects hierarchy](#) on page 71
- [Analyzing historical data](#) on page 71
- [What synchronizing time axes is](#) on page 72
- [Viewing performance data](#) on page 72
- [Displaying tabbed views](#) on page 72
- [Selecting a performance view](#) on page 73
- [Closing a performance view](#) on page 73
- [Actions you can perform in the performance views](#) on page 73

- [Viewing the time period in a chart](#) on page 74
- [Resetting both axes](#) on page 74
- [Synchronizing time axes](#) on page 74
- [Undoing synchronization of time axes](#) on page 75
- [How to use the legend for predefined views and custom views](#) on page 75
- [How to view thresholds](#) on page 75
- [Creating advanced views](#) on page 75
- [Adding thresholds using a view](#) on page 76
- [Changing the chart type](#) on page 76
- [Playing or pausing data collection](#) on page 76
- [Printing a chart from a view](#) on page 77
- [Enabling charts to scale the y axis](#) on page 77
- [Diagnosing a performance issue](#) on page 77
- [Performance monitoring with custom views](#) on page 78
- [When must you create a custom view](#) on page 78
- [How data from counters is displayed](#) on page 78
- [Viewing data](#) on page 78
- [Creating a custom view](#) on page 79
- [Opening a custom view](#) on page 79
- [Editing custom views](#) on page 80
- [Deleting a custom view](#) on page 80
- [CPU utilization issues on storage systems or vFiler hosts](#) on page 81
- [Analysis of real-time data](#) on page 81
- [Methods for saving performance data](#) on page 81
- [Saving a chart](#) on page 81
- [Exporting a view to a .csv file](#) on page 82
- [Predefined views of logical and physical objects](#) on page 82
- [Predefined views at the global or group level](#) on page 83
- [Predefined views at the storage system level](#) on page 85
- [Predefined views at the vFiler unit level](#) on page 90
- [Predefined views at the processor level](#) on page 91
- [Predefined views at the network interface level](#) on page 91
- [Predefined views at the dataset level](#) on page 92
- [Predefined views at the resource pool level](#) on page 92
- [Predefined views at the volume level](#) on page 93
- [Predefined views at the qtree level](#) on page 95
- [Predefined views at the LUN level](#) on page 96
- [Predefined views at the aggregate level](#) on page 97
- [Predefined views at the disk level](#) on page 97
- [Predefined view at the target level](#) on page 98

## Alarms, Storage systems, and Thresholds

- [Alarms, hosts, and thresholds](#) on page 104
- [What alarms are](#) on page 104
- [List of alarm management tasks](#) on page 104
- [Overview of alarm management tasks](#) on page 105
- [Monitoring alarms](#) on page 105
- [Creating alarms](#) on page 106
- [Editing alarms](#) on page 106
- [Testing alarms](#) on page 107
- [Enabling or disabling alarms](#) on page 107
- [Adding alarms](#) on page 108
- [Deleting alarms](#) on page 109
- [Responding to alarms](#) on page 109
- [How hosts become visible to Performance Advisor](#) on page 110
- [Host table field descriptions](#) on page 110
- [Editing host credentials](#) on page 111
- [Configuration of data collection](#) on page 112
- [Copying the data collection configuration](#) on page 112
- [Effect of increasing sample rates](#) on page 112
- [Setting retention periods and sample rates](#) on page 113
- [How thresholds work](#) on page 113
- [What resource properties are](#) on page 114
- [Viewing threshold values](#) on page 114
- [When to use thresholds in combination](#) on page 115
- [What the Details tab is](#) on page 115
- [Adding thresholds](#) on page 115
- [Editing thresholds by using the Summary tab](#) on page 115
- [Editing thresholds using charts](#) on page 116
- [Editing thresholds using the Details tab](#) on page 116
- [Deleting thresholds](#) on page 117
- [What a threshold template is](#) on page 117

## Clustered environments: List of Performance Advisor tasks and information

Because Unified Manager supports both clustered and 7-Mode environments, it is important to identify the information that relates to your 7-Mode environment.

The following list provides links to all the administration tasks and information related to storage in a clustered environment:

## Performance Advisor

- [What Performance Advisor is](#) on page 8
- [Topology of Performance Advisor](#) on page 8
- [Performance Advisor topology](#) on page 8
- [Authentication of a Performance Advisor instance](#) on page 9
- [Performance Advisor support for hierarchical groups](#) on page 9
- [Performance Advisor support for secure connections](#) on page 9
- [Administrator roles in Performance Advisor](#) on page 10

## About NetApp Management Console

- [About NetApp Management Console](#) on page 20
- [What NetApp Management Console is](#) on page 20
- [Applications and capabilities supported by the NetApp Management Console](#) on page 20
- [NetApp Management Console window layout and navigation](#) on page 21
- [NetApp Management Console window customization](#) on page 22
- [NetApp Management Console data filtering](#) on page 23

## Performance objects and counters

- [Performance objects and counters](#) on page 25
- [What performance objects are](#) on page 25
- [List of performance objects](#) on page 26
- [What a performance counter is](#) on page 27
- [Definitions of performance counters](#) on page 28
- [List of CLI commands](#) on page 49

## Access permissions for Role Based Access Control

- [What access permission is](#) on page 52
- [RBAC for setting thresholds](#) on page 53

## Performance Advisor setup

- [Performance Advisor and server setup requirements](#) on page 58
- [Enabling the performance-monitoring server](#) on page 58
- [Setting up transport between the performance-monitoring server and Performance Advisor](#) on page 58
- [Setting up transport protocols between Performance Advisor and monitored devices](#) on page 60
- [Setting up appliance-level transport between Performance Advisor and monitored devices](#) on page 59

## Performance Advisor user interface

- [Getting started with the Performance Advisor user interface](#) on page 61
- [Starting Performance Advisor](#) on page 61
- [Disconnecting from Performance Advisor](#) on page 61
- [Storage objects unavailable in Performance Advisor](#) on page 61
- [Unavailable menu options in the Performance Advisor interface](#) on page 62
- [Zero-value data in a Performance Advisor chart](#) on page 62
- [Absence of data in a Performance Advisor chart](#) on page 62
- [Display of new storage systems in Performance Advisor](#) on page 63

## Dashboard and events

- [Overview of the NetApp Management Console dashboard](#) on page 64
- [Dashboard panel descriptions](#) on page 64
- [What events are](#) on page 65
- [How to know when an event occurs](#) on page 65
- [Monitoring events](#) on page 66
- [Responding to and acknowledging events](#) on page 67
- [Deleting events](#) on page 67

## Views

- [Views in Performance Advisor](#) on page 69
- [What the performance view window is](#) on page 69
- [What advanced views are](#) on page 70
- [Types of data in Performance Advisor](#) on page 71
- [Logical and physical objects hierarchy](#) on page 71
- [Analyzing historical data](#) on page 71
- [What synchronizing time axes is](#) on page 72
- [Viewing performance data](#) on page 72
- [Displaying tabbed views](#) on page 72
- [Selecting a performance view](#) on page 73
- [Closing a performance view](#) on page 73
- [Actions you can perform in the performance views](#) on page 73
- [Viewing the time period in a chart](#) on page 74
- [Resetting both axes](#) on page 74
- [Synchronizing time axes](#) on page 74
- [Undoing synchronization of time axes](#) on page 75
- [How to use the legend for predefined views and custom views](#) on page 75
- [How to view thresholds](#) on page 75
- [Creating advanced views](#) on page 75

- [Adding thresholds using a view](#) on page 76
- [Changing the chart type](#) on page 76
- [Playing or pausing data collection](#) on page 76
- [Printing a chart from a view](#) on page 77
- [Enabling charts to scale the y axis](#) on page 77
- [Viewing data](#) on page 78
- [CPU utilization issues on storage systems](#) on page 81
- [Methods for saving performance data](#) on page 81
- [Saving a chart](#) on page 81
- [Exporting a view to a .csv file](#) on page 82
- [Predefined views of logical and physical objects](#) on page 82
- [Predefined views at the global or group level](#) on page 83
- [Predefined views at the processor level](#) on page 91
- [Predefined views at the network interface level](#) on page 91
- [Predefined views at the volume level](#) on page 93
- [Predefined views at the LUN level](#) on page 96
- [Predefined views at the aggregate level](#) on page 97
- [Predefined views at the disk level](#) on page 97
- [Predefined views at the cluster level](#) on page 98
- [Predefined views at the Vserver level](#) on page 99
- [Predefined views at the node level](#) on page 101

## **Alarms, Storage systems, and Thresholds**

- [Alarms, hosts, and thresholds](#) on page 104
- [What alarms are](#) on page 104
- [List of alarm management tasks](#) on page 104
- [Overview of alarm management tasks](#) on page 105
- [Monitoring alarms](#) on page 105
- [Creating alarms](#) on page 106
- [Editing alarms](#) on page 106
- [Testing alarms](#) on page 107
- [Enabling or disabling alarms](#) on page 107
- [Adding alarms](#) on page 108
- [Deleting alarms](#) on page 109
- [Responding to alarms](#) on page 109
- [How hosts become visible to Performance Advisor](#) on page 110
- [Host table field descriptions](#) on page 110
- [Editing host credentials](#) on page 111
- [How thresholds work](#) on page 113
- [What resource properties are](#) on page 114

- *Viewing threshold values* on page 114
- *When to use thresholds in combination* on page 115
- *What the Details tab is* on page 115
- *Adding thresholds* on page 115
- *Editing thresholds by using the Summary tab* on page 115
- *Editing thresholds using charts* on page 116
- *Editing thresholds using the Details tab* on page 116
- *Deleting thresholds* on page 117

## About NetApp Management Console

---

NetApp Management Console is used by administrators to complete management tasks aided by the DataFabric Manager server, but it runs on a Windows or Linux system separate from the server on which the DataFabric Manager server is installed.

NetApp Management Console enables storage, application, and server administrators to perform management tasks such as data backup protection, space management, resource provisioning, data migration, and performance tuning, without having to switch between separate user interfaces.

The DataFabric Manager server provides infrastructure services (such as discovery, monitoring, role-based access control (RBAC), auditing, and logging for products in the storage and data suites) for NetApp Manageability Software client consoles. The DataFabric Manager server software runs on a separate server and is managed through the Operations Manager console, the Web-based user interface of the DataFabric Manager server. For more information about the DataFabric Manager server and Operations Manager console, see the *Operations Manager Administration Guide*.

### Related information

*[Documentation on the NetApp Support Site: support.netapp.com](http://support.netapp.com)*

## What NetApp Management Console is

NetApp Management Console is a client platform that supports NetApp Manageability Software capabilities. Together, NetApp Management Console and the associated OnCommand Unified Manager console, enable you to implement both policy-based and on-demand protection, provisioning, migration, and restoration of data contained in your physical and virtual storage systems.

## Applications and capabilities supported by the NetApp Management Console

The NetApp Management Console supports Performance Advisor, data protection capability, and provisioning capability.

<b>Performance Advisor</b>	This application provides a single location from which you can view comprehensive information about the performance of storage systems, vFiler units, storage nodes and Vservers, and perform short-trend analysis. The application also helps you identify the data infrastructure causes and potential causes of reduced performance.
----------------------------	---

**The NetApp Management Console data protection capability**

The NetApp Management Console data protection capability provides a policy-based management tool to help you unify and automate backup and mirroring operations. This capability uses a holistic approach to data protection. It provides end-to-end, workflow-based design and seamless integration of SnapVault, SnapMirror, and Open Systems SnapVault to enable you to manage large-scale deployments easily.

The disaster recovery feature of the NetApp Management Console data protection capability enhances your data protection services by enabling you to continue to provide data access to your users, even in the event of mishap or disaster that disables or destroys the storage systems and V-Series systems in your primary data node. You can quickly enable your secondary storage systems to provide primary data storage access to your users with little or no interruption, until your primary storage systems are reenabled or replaced.

**The NetApp Management Console provisioning capability**

The NetApp Management Console provisioning capability helps you simplify and automate the tasks of provisioning and managing storage. It provides policy-based provisioning and conformance of storage in datasets. This capability also enables you to manually add volumes or qtrees to a dataset at any time, provides manual controls for space and capacity management of existing storage and newly provisioned storage, and enables you to migrate datasets and vFiler units to a new storage destination.

The deduplication feature of the NetApp Management Console provisioning capability enhances your data provisioning services by enabling you to eliminate duplicate data blocks to reduce the amount of storage space used to store active data.

## NetApp Management Console window layout and navigation

You can use NetApp Management Console to navigate between capabilities, to display Help, and to log out of the console.

**Learning about the NetApp Management Console data protection capability**

The Get Started section of the user interface provides an overview of the NetApp Management Console data protection capability, a short tutorial that demonstrates how to set up protection, and a list of frequently asked questions (FAQs).

**Learning about disaster recovery**

The Get Started section of the user interface provides an overview of disaster recovery, a short tutorial that demonstrates how to set up disaster recovery, and a list of frequently asked questions (FAQs).

**Learning about the NetApp Management Console provisioning capability**

The Get Started section of the user interface provides an overview of the NetApp Management Console provisioning capability, a short tutorial that demonstrates how to set up provisioning, and a list of frequently asked questions (FAQs).

- Moving back and forth between panes** The Back and Forward arrow buttons helps you toggle between your last and previous panes.
- Toggleing between capabilities**
- To use the NetApp Management Console data protection capability or the NetApp Management Console provisioning capability, select **Tasks > Manage Data** or go to the Tasks Bar and click .
  - To use Performance Advisor, select **Tasks > Manage Performance** or go to the Tasks Bar and click .
- Displaying help**
- To display the Help for all applications and capabilities on NetApp Management Console, click **Help > Help Contents**.
  - To display Help for the specific window that is currently displayed, click **Help > Help For This View** or click .
- Logging out**
- To log out, select **File > Log Out** or click the **logout** button.
  - To log out and close NetApp Management Console, select **File > Exit**.
- Viewing product license information** To view information about the product licenses you have installed, click **Help > About > Licenses**. Removed or added licenses are reflected in the license list after you restart NetApp Management Console.

Capabilities that run in NetApp Management Console vary in their window layout. However, the windows are generally divided into two panes:

- Use the menu bar on the left to move within NetApp Management Console.
- Use the content pane on the right to view and manage data.  
The content pane is generally divided into two areas: lists of selectable data and details of the selected data. Click , when it is displayed, for additional details.

**Note:** Some applications or capabilities might have additional navigation features not described in this section. In addition, software version incompatibility might result in some reduced functionality, which might cause some menu options or buttons to be disabled.

## NetApp Management Console window customization

NetApp Management Console includes features that you can use to customize the console window layout. By customizing the console windows, you can control which data is viewable or how it is displayed.

**Note:** You cannot perform all the following customizing tasks for every window.

**Hiding or redisplaying the Tasks Bar**

You can hide the Tasks Bar to increase the space available for the content pane. (The overall width of the window remains the same when the bar is hidden.) You use the **View** menu to hide or display the bar.

**Selecting columns to display**

In content panes that include a list divided into columns, you can choose which columns you want to display. To display or hide a column, you can click the column-selection icon in the upper-right corner above the scroll bar () , and then click the name of a column heading from the selection list. Columns that are already displayed are identified with a check mark.

**Note:** The default version of a list does not necessarily include all the available columns. You might find additional columns available in the column selection list.

**Readjusting column widths**

In content panes that include a list divided into columns, you can adjust the width of individual columns by horizontally dragging the vertical line between the column headings. If accommodating all the columns you want to include results in column widths that obscure data, you can still see the entire value of a column field by placing your cursor over the field. A tool tip opens, displaying the entire value of the field. You can maximize data visibility across all the columns by clicking the column selection icon () and selecting Pack All Columns.

**Rearranging the column order**

In content panes that include a list divided into columns, you can rearrange the column order for a session by dragging and dropping column headings horizontally within the table. The arrangement persists until you exit the console.

**Reapportioning a content pane**

A splitter bar divides a content pane list area from the details area. You can move the splitter bar to increase or decrease the proportion of the content pane that displays the list of selectable data.

## NetApp Management Console data filtering

You can use the data filtering features to display only data meeting the criteria you specify.

In large-scale environments, the content pane might list so much data that it becomes difficult to locate the information you want. Filtering the data by specified criteria helps you focus on the issues most important to you.

**Note:** Not all filtering features are available for every window.

**Filtering by group**

The Group selection list in the toolbar enables you to display only the data that pertains to objects in a selected group. This setting persists until you log out or choose a different group.

**Filtering by regular expression**

You can filter columns displaying site-specific values, such as storage system names or dataset names, by regular expression. To filter a column by regular expression, click the filter icon in the column heading (  ) and specify the regular expression to match against values in the column field. Headings of filtered columns are highlighted to remind you that some data is not currently displayed.

NetApp Management Console uses Java regular expression syntax for filtering data, for example:

- To view only items beginning with the letters "sch," type `sch` in the filter field, which matches Schedule but not SnapMirror.
- To view only items containing "space" somewhere in their string, type `.*space` in the filter field, which matches strings such as Volume Space Normal.
- To view only items ending with the string "ok," type `*ok` in the filter field, which matches strings such as SnapMirror: Date Ok.

**Filtering by column values**

When a column displays a set of predefined possible values, you can choose to display only the rows of data that include a selected value. To filter a column by a specific, predefined value, click the filter icon in the column heading (  ) and select one or more of the predefined values from the drop-down list. Headings of filtered columns are highlighted to remind you that some data is not currently displayed. Click "All" to select or clear all the values.

**Filtering by column view**

You can click  in the upper-right corner of the list to select the columns you want displayed.

**Sorting by column values**

You can click the column header to change the sort order of the column entries. When you click the column header, the sort arrow appears for that column.

# Performance objects and counters

You can monitor the performance of storage systems by understanding performance objects and counters in Performance Advisor.

## What performance objects are

Performance objects are collections of counters for specific subsystem types.

The names of the objects correspond to the subsystem names that are displayed in the navigation pane of Performance Advisor.

## List of performance objects (7-Mode environments only)

You should be aware of the performance objects that you monitor as part of storage administration in 7-Mode systems.

Performance Advisor displays a default performance view for every performance object listed in the following tables, except for qtrees.

**Note:** In the following table, performance objects that apply to both storage system and vFiler units are noted in parentheses. All other listed performance objects apply to storage system only.

The following performance objects are available for monitoring storage objects running Data ONTAP 8.0 (or later):

Object name	Type of data contained
aggregate	Aggregate statistics (includes aggregates containing traditional volumes)
cifs	CIFS statistics for systems with a CIFS license
disk	Disk statistics (per disk)
fcp	FCP statistics for systems with an FCP license
ifnet	Statistics on various network interface cards in the system  <b>Note:</b> It is possible that a system can have all target cards and no interface cards.
iscsi	iSCSI statistics for systems with an iSCSI license
LUN (applies to vFiler units also)	LUN statistics (per LUN)
nfsv3	NFS statistics for systems with an NFS license

Object name	Type of data contained
nfsv4	NFS statistics for systems with an NFS license
processor	Processor statistics (per processor)
qtree (applies to vFiler units also)	Qtree statistics (per qtree)  <b>Note:</b> To minimize negative performance impact on storage systems that it monitors, Performance Advisor does not automatically generate default performance views for its qtree performance objects; however, you can use the application to define performance views for individual qtrees.
system	Summary of the general performance health status of the system
target	Statistics on the target cards in the system
vFiler units (applies to vFiler units and their hosting storage systems)	Statistics that apply to vFiler units and their hosting storage systems
volume (applies to vFiler units also)	Volume statistics (per volume)

## List of performance objects (clustered environments only)

You should be aware of the performance objects that you monitor when managing clusters. Performance Advisor displays a default performance view for every performance object that is listed in the following tables, except for qtrees.

The following performance objects are available for monitoring storage objects running Data ONTAP 8.0 or later:

Object name	Type of data contained
system	Summary of the general performance health status of the system
nfsv3	NFS statistics for systems with an NFS license
cifs:node	CIFS statistics for systems with a CIFS license, at the node level
cifs:vserver	CIFS statistics for systems with a CIFS license, at the Vserver level
fcplif:node	FCP statistics for systems with an FCP license, at the node level

Object name	Type of data contained
fcplif:vserver	FCP statistics for systems with an FCP license, at the Vserver level
iscsilif:vserver	iSCSI statistics for systems with an iSCSI license, at the Vserver level
LUN	LUN statistics (per LUN)
processor	Processor statistics (per processor)
ifnet	Statistics on the network interface cards in the system
aggregate	Aggregate statistics
volume	Volume statistics (per volume)
volume:vserver	Volume statistics, at the Vserver level
volume:node	Volume statistics, at the node level
disk	Disk statistics (per disk)

## What a performance counter is

A performance counter is the statistical measurement of activity on a storage object or a storage subsystem. The DataFabric Manager server collects data from the monitored storage object, and Performance Advisor uses this data to generate a performance chart or part of a performance chart.

For example, Performance Advisor might use the volume's total\_ops counter of a storage system to generate a chart that displays total operations-per-second on that volume on a minute-to-minute basis.

The server collects data for a counter from the time the counter is added to a view. When the view is deleted, data collection for the counter stops. When you add a counter to a view, data collection begins with the counter in that view.

**Note:** Each type of storage object or subsystem has a set of counters. However, a particular storage object might not have non-zero data for all the counters available to it.

For example, every storage system has an http\_ops counter. However, if HTTP is not enabled on the storage system, the counter contains only zero-value data. If SnapMirror is not licensed on the storage system, the counters for the SnapMirror statistics do not contain any data.

## Definitions of performance counters

You must be aware of the performance counters in Performance Advisor that enable you to collect data for each performance object.

The availability of the counters and their descriptions might vary depending on the version of Data ONTAP running on the storage system.

### Aggregate object

Counter name	Description	Unit
total_transfers	Total number of disk operations serviced by the aggregate	per sec
user_reads	Number of user read operations performed by the aggregate	per sec
user_writes	Number of user write operations performed by the aggregate	per sec
cp_reads	Number of read operations to the aggregate during consistency-point processing	per sec
user_read_blocks	Number of blocks transferred for user read operations	per sec
user_write_blocks	Number of blocks transferred for user write operations	per sec
cp_read_blocks	Number of blocks transferred for consistency-point read operations	per sec

### cifs object (7-Mode environments only)

Counter name	Description	Unit
cifs_latency	Average latency for CIFS operations	millisec
cifs_ops	Total number of CIFS operations	per sec

**cifs:node object (clustered environments only)**

Counter name	Description	Unit
cifs_latency	Aggregated CIFS latency at the node level	microsec
cifs_ops	Aggregated CIFS operations at the node level	per sec

**cifs:vserver object (clustered environments only)**

Counter name	Description	Unit
cifs_latency	Aggregated CIFS latency at the Vserver level	microsec
cifs_ops	Aggregated CIFS operations at the Vserver level	per sec

**disk object**

Counter name	Description	Unit
total_transfers	Total number of disk operations performed by the aggregate	per sec
user_reads	Number of user read operations performed by the aggregate	per sec
user_writes	Number of user write operations performed by the aggregate	per sec
cp_reads	Number of read operations to the aggregate during consistency point processing	per sec
guaranteed_reads	Number of disk read operations initiated each second for RAID reconstruction or scrubbing activities	per sec
guaranteed_writes	Number of write operations initiated each second for RAID reconstruction or scrubbing activities	per sec

<b>Counter name</b>	<b>Description</b>	<b>Unit</b>
user_read_chain	Average number of blocks transferred in each user read operation	NA
user_write_chain	Average number of blocks transferred in each user write operation	NA
cp_read_chain	Average number of blocks transferred in each consistency-point read operation during a consistency point	NA
disk_busy	Time since the last outstanding request to the disk	percent
user_read_blocks	Number of blocks transferred for user read operations	per sec
user_write_blocks	Number of blocks transferred for user write operations	per sec
cp_read_blocks	Number of blocks transferred for consistency-point read operations	per sec
user_read_latency	Average latency per block, in microseconds, for user read operations	microsec
user_write_latency	Average latency per block, in microseconds, for user write operations	microsec
cp_read_latency	Average latency per block, in microseconds, for consistency-point read operations	microsec

**disk object (7-Mode environments only)**

<b>Counter name</b>	<b>Description</b>	<b>Unit</b>
throughput	Disk KB read and written	per sec

**fcp object (7-Mode environments only)**

Counter name	Description	Unit
fcp_ops	FCP operations per second	per sec
fcp_write_data	FCP bytes written per second	b per sec
fcp_read_data	FCP bytes read per second	b per sec
fcp_read_latency	Average latency of read operations for all the LUNs in the system accessed over FCP	millisec
fcp_read_ops	Total number of read operations for all the LUNs in the system accessed over FCP	per sec
fcp_write_latency	Average latency of write operations for all the LUNs in the system accessed over FCP	millisec
fcp_write_ops	Total number of write operations for all the LUNs in the system accessed over FCP	per sec
fcp_throughput	Total FCP data sent and received by the system	b per sec

**fcp\_lif:node object (clustered environments only)**

Counter name	Description	Unit
read_ops	Aggregated FCP read operations at the node level	per sec
write_ops	Aggregated FCP write operations at the node level	per sec
other_ops	Other FCP operations at the node level	per sec
read_data	Aggregated read data at the node level	b per sec
write_data	Aggregated write data at the node level	b per sec

**fcp\_lif:vserver object (clustered environments only)**

Counter name	Description	Unit
read_ops	Aggregated FCP read operations at the Vserver level	per sec
write_ops	Aggregated FCP write operations at the Vserver level	per sec
other_ops	Other FCP operations at the Vserver level	per sec
read_data	Aggregated read data at the Vserver level	b per sec
write_data	Aggregated write data at the Vserver level	b per sec

**ifnet object**

Counter name	Description	Unit
recv_packets	Packets received per second	per sec
recv_errors	Errors per second while receiving packets	per sec
send_packets	Packets sent per second	per sec
send_errors	Errors per second while sending packets	per sec
collisions	Collisions per second on CSMA interfaces	per sec
recv_data	Total bytes received per second	b per sec
send_data	Total bytes sent per second	b per sec
recv_mcasts	Packets received per second through multicast	per sec
send_mcasts	Packets sent per second through multicast	per sec
total_data	Total data sent and received over the interface	b per sec
total_errors	Total data sent and received over the interface	per sec

Counter name	Description	Unit
total_mcasts	Total number of errors while receiving and sending over the interface	per sec
total_packets	Total packets sent and received through multicast	per sec

### iSCSI object (7-Mode environments only)

Counter name	Description	Unit
iscsi_ops	iSCSI operations per second	per sec
iscsi_write_data	iSCSI bytes written per second	b per sec
iscsi_read_data	iSCSI bytes read per second	b per sec
iscsi_read_latency	Average latency of read operations for all the LUNs in the system accessed over iSCSI	millisec
iscsi_read_ops	Total number of read operations for all the LUNs in the system accessed over iSCSI	per sec
iscsi_write_latency	Average latency of write operations for all the LUNs in the system accessed over iSCSI	millisec
iscsi_write_ops	Total number of write operations for all the LUNs in the system accessed over iSCSI	per sec
iscsi_throughput	Total FCP data sent and received by the system	b per sec

### iscsi\_lif:vserver object (clustered environments only)

Counter name	Description	Unit
iscsi_read_ops	Aggregated total number of read operations for all the LUNs in the system accessed over iSCSI, at the Vserver level	per sec

Counter name	Description	Unit
iscsi_write_ops	Aggregated total number of write operations for all the LUNs in the system accessed over iSCSI, at the Vserver level	per sec

### LUN object

Counter name	Description	Unit
read_ops	Read operations per second	per sec
write_ops	Write operations per second	per sec
other_ops	Other operations per second	per sec
read_data	Read bytes per second	b per sec
write_data	Write bytes per second	b per sec
total_ops	Total number of operations on the LUN	per sec
avg_latency	Average latency for all operations on the LUN	millisec
read_align_histo	Histogram of WAFL read alignment	percent
read_partial_blocks	Percentage of reads whose size is not a multiple of the WAFL block size	percent
throughput	Total data sent and received by the LUN	b per sec
unaligned_reads	Percentage of WAFL unaligned read operations	percent
unaligned_writes	Percentage of WAFL unaligned write operations	percent
write_align_histo	Histogram of WAFL write alignment	percent
write_partial_blocks	Percentage of write whose size is not a multiple of the WAFL block size	percent

**nfsv3 object**

Counter name	Description	Unit
nfsv3_ops	Total number of NFSv3 operations	per sec
nfsv3_read_ops	Total NFSv3 read operations	per sec
nfsv3_write_ops	Total NFSv3 write operations	per sec

**nfsv3 object (7-Mode environments only)**

Counter name	Description	Unit
nfsv3_avg_op_latency	Average latency of the NFSv3 operations	millisec
nfsv3_read_latency	Average latency, for NFSv3 read operations	millisec
nfsv3_read_size_histo	Histogram of NFSv3 read sizes	NA
nfsv3_write_latency	Average latency, for NFSv3 write operations	millisec
nfsv3_write_size_histo	Histogram of NFSv3 write sizes	NA

**nfsv4 object (7-Mode environments only)**

Counter name	Description	Unit
nfsv4_ops	Number of total NFSv4 operations	per sec
nfsv4_read_ops	Number of NFSv4 read operations	per sec
nfsv4_avg_latency	Average latency of an NFSv4 request	millisec
nfsv4_write_ops	Number of NFSv4 write operations	per sec
nfsv4_read_size_histo	Histogram of NFS v4 read sizes	NA
nfsv4_write_size_histo	Histogram of NFS v4 write sizes	NA

**Perf object**

Counter name	Description	Unit
data_disk_util_percent_histo	Histogram of data disk utilization	percent
ops_per_sec_histo	Histogram of operations handled by the appliance	percent
parity_disk_util_percent_histo	Histogram of parity disk utilization	percent

**Priority queue (7-Mode environments only)**

Counter name	Description	Unit
max_user_reads	Maximum number of user reads ever outstanding at one time for this queue	NA
nvlog_limit	Amount of nvlog this queue might use during CP	NA
nvlog_limit_full	Number of times the nvlog queue limit was hit during CP	NA
nvlog_used_max	Maximum amount of nvlog this queue used during a CP	NA
sys_read_limit	Limit on system reads outstanding on this queue	NA
sys_sched_total	Number of scheduled system requests	per sec
sys_weight	System request scheduling weight within the priority queue	NA
usr_read_limit	Limit on user reads outstanding on this queue	NA
usr_sched_total	Number of scheduling user requests	per sec
usr_weight	User request scheduling weight within a queue	NA

**Prescheduled (7-Mode environments only)**

Counter name	Description	Unit
bypass_rate	Rate at which guardrail scheduler is bypassed	per sec
delayed_io_blocked	Number of times delayed messages were found and all queues were I/O blocked	NA
delayed_messages	Number of times a delayed message was found and pushed	NA
preempt_rate	Scheduler preemption rate	per sec
queued	Current messages queued	NA
queued_max	Maximum scheduling queue depth	NA
schedslow	Number of times scheduler was found to be slow	NA
wake_on_mesg_rate	Scheduler wake on message received rate	per sec
wake_on_sig_rate	Scheduler wake on signal received rate	per sec

**Processor object**

Counter name	Description	Unit
domain_busy	Array of processor time spent in various domains	percent
processor_busy	Percentage of elapsed time that the processor is executing non-idle processes	percent

**qtree object (7-Mode environments only)**

**Note:** To minimize negative performance impact on storage systems that Performance Advisor monitors, the default performance views are not automatically generated for its qtree performance objects. However, you can use the following counters to define performance views for individual qtrees.

Counter name	Description	Unit
nfs_ops	NFS operations per second	per sec
cifs_ops	CIFS operations per second	per sec
internal_ops	Number of internal operations generated by activities such as SnapMirror and backup to the qtree	per sec
total_ops	Total operations on the qtree	per sec

### System object

Counter name	Description	Unit
net_data_recv	Network KB received per second	per sec
net_data_sent	Network KB sent per second	per sec
disk_data_read	Disk KB read per second	per sec
disk_data_written	Disk KB written per second	per sec
cpu_busy	Percentage of time one or more processors is busy in the system  <b>Note:</b> For storage systems running Data ONTAP 7.2 or earlier, the cpu_busy counter is the amount of time that any one CPU is busy. This results in a value for cpu_busy that is inflated. For storage systems running Data ONTAP 7.2.1 or later, the cpu_busy counter is the greater of either the average CPU utilization or the busiest domain.	percent
avg_processor_busy	Average processor utilization across all processors in the system	percent
total_processor_busy	Total processor utilization of all processors in the system	percent
disk_data_read_mbps	MB read per second	mb per sec

Counter name	Description	Unit
disk_data_written_mbps	MB written per second	mb per sec
nas_throughput	Network throughput in a NAS network	kb per sec
disk_throughput	Disk throughput in the storage system or cluster	kb per sec

### System object (7-Mode environments only)

Counter name	Description	Unit
cifs_ops	CIFS operations per second	per sec
dafs_ops	DAFS operations per second	NA
fcp_ops	FCP object operations per second	per sec
http_ops	HTTP operations per second	per sec
iscsi_ops	iSCSI operations per second	per sec
nfs_ops	NFS operations per second	per sec
load_inbound_mbps	Total data received by the system	mb per sec
load_outbound_mbps	Total data sent by the system	mb per sec
load_read_bytes_ratio	Ratio of the disk data read and load outbound mbps	NA
load_total_mbps	Total data sent and received by the system	mb per sec
load_write_bytes_ratio	Ratio of the disk data write and load inbound mbps	NA
nc_urls	NetCache URLs served per second	NA
pa_total_ops	Total operations on the system	per sec
pq_max_sys_reads	Maximum number of system read requests ever outstanding at one time for the default queue	NA

Counter name	Description	Unit
pq_max_user_reads	Maximum number of user reads ever outstanding at one time for the default queue	NA
pq_nvlog_limit	Amount of nvlog default queue might use during CP	NA
pq_nvlog_limit_full	Number of times the nvlog queue limit was hit during CP for the default queue	NA
pq_nvlog_used_max	Maximum amount of nvlog queue used during a CP	NA
pq_sys_read_limit	Limit on system reads outstanding on the default queue	NA
pq_sys_sched_total	Number of scheduled system requests for the default queue	per sec
pq_sys_weight	System request scheduling weight within the default queue	NA
pq_usr_read_limit	Limit on user reads outstanding on the default queue	NA
pq_usr_sched_total	Number of scheduling user requests for the default queue	per sec
pq_usr_weight	User request scheduling weight within the default queue	NA
san_throughput	Total SAN data sent and received by the system	kb per sec

### Target object (7-Mode environments only)

Counter name	Description	Unit
queue_full	iSCSI queue full responses per second	per sec
read_ops	Read operations per second	per sec
write_ops	Write operations per second	per sec
other_ops	Other operations per second	per sec

**vFiler object (7-Mode environments only)**

Counter name	Description	Unit
vfiler_cpu_busy	Percentage of CPU capacity used per second by hosting storage system that contains the vFiler unit	percentage
vfiler_net_data_recv	Network data received in kilobytes per second	kb per sec
vfiler_net_data_sent	Network data sent in kilobytes per second	kb per sec
vfiler_read_ops	Read operations on the vFiler unit	per sec
vfiler_write_ops	Write operations on the vFiler unit	per sec
vfiler_misc_ops	Miscellaneous operations on the vFiler unit	per sec
vfiler_read_bytes	Data read in kilobytes per second on the vFiler unit	kb per sec
vfiler_write_bytes	Data written in kilobytes per second on the vFiler unit	kb per sec
vfiler_data_transferred	Total data transferred by the vFiler unit	kb per sec
vfiler_nw_throughput	Total network data received and transmitted by the vFiler unit	kb per sec
vfiler_total_ops	Total operations on the vFiler unit	per sec

**Volume object**

Counter name	Description	Unit
total_ops	Number of operations performed by the volume	per sec
avg_latency	Average latency for all the operations on the volume	millisec
read_ops	Number of reads to the volume	per sec

<b>Counter name</b>	<b>Description</b>	<b>Unit</b>
read_data	Bytes read from the volume	b per sec
read_latency	Average time for reads from the volume	microsec
write_data	Bytes written to the volume	b per sec
write_latency	Average time for writes to the volume	microsec
other_ops	Number of other operations to the volume	per sec
other_latency	Average time for other operations to the volume	microsec
write_ops	Number of writes to the volume	per sec
nfs_read_ops	Number of NFS reads to the volume	per sec
nfs_read_latency	Average time for NFS reads from the volume	microsec
nfs_write_ops	Number of NFS writes to the volume	per sec
nfs_write_latency	Average time for NFS writes to the volume	microsec
nfs_other_ops	Number of other NFS operations to the volume	per sec
nfs_other_latency	Average time for other NFS operations to the volume	microsec
cifs_latency	Average time for CIFS operations to the volume	millisec
cifs_ops	CIFS operations on the volume	per sec
cifs_read_ops	Number of CIFS reads to the volume	per sec
cifs_read_latency	Average time for CIFS reads to the volume	microsec
cifs_write_ops	Number of CIFS writes to the volume	per sec
cifs_write_latency	Average time for CIFS writes to the volume	microsec
cifs_other_ops	Number of other CIFS operations to the volume	per sec

<b>Counter name</b>	<b>Description</b>	<b>Unit</b>
cifs_other_latency	Average time for other CIFS operations to the volume	microsec
san_read_ops	Number of block protocol reads to the volume	per sec
san_read_latency	Average time for block protocol reads to the volume	microsec
san_write_ops	Number of block protocol writes to the volume	per sec
san_write_latency	Average time for block protocol writes to the volume	microsec
san_other_ops	Number of other block protocol operations to the volume	per sec
san_other_latency	Average time for other block protocol operations to the volume	microsec
flexcache_other_ops	Number of other FlexCache operations to the volume	per sec
flexcache_read_ops	Number of FlexCache read operations from the volume	per sec
flexcache_write_ops	Number of FlexCache write operations to the volume	per sec
nfs_latency	Average time for NFS operations to the volume	millisec
nfs_ops	user operations on the volume	per sec
sys_ops	sys operations on the volume	per sec
throughput	Total data sent and received by the volume	b per sec
user_ops	user operations on the volume	per sec

**Volume object (7-Mode environments only)**

Counter name	Description	Unit
pq_max_sys_reads	Maximum number of system read requests ever outstanding at one time for the default queue for the volume	NA
pq_max_user_reads	Maximum number of user reads ever outstanding at one time for this queue in the volume	NA
pq_nvlog_limit	Amount of nvlog this queue might use during CP for the volume	NA
pq_nvlog_limit_full	Number of times the nvlog queue limit was hit during CP for the volume	NA
pq_nvlog_used_max	Maximum amount of nvlog this queue might use during CP for the volume	NA
pq_sys_read_limit	Limit on System reads outstanding on this queue in the volume	NA
pq_sys_sched_total	Number of scheduling system requests with in the volume	per_sec
pq_sys_weight	System request scheduling weight within the volume	NA
pq_usr_read_limit	Limit on user reads outstanding on this queue in the volume	NA
pq_usr_sched_total	Number of scheduling user requests with in the volume	per sec
pq_usr_weight	User request scheduling weight within the volume	NA

**Volume object (clustered environments only)**

Counter name	Description	Unit
flexcache_other_ops	Number of other FlexCache operations to the volume	per sec

Counter name	Description	Unit
flexcache_read_ops	Number of read FlexCache operations to the volume	per sec
flexcache_write_ops	Number of write FlexCache operations to the volume	per sec
san_latency	Aggregated SAN latency at the volume level	millisec
san_ops	SAN operations per second	per sec

### volume:vserver object (clustered environments only)

Counter name	Description	Unit
other_ops	Aggregated number of other operations to the volume at the Vserver level	per sec
read_data	Aggregated bytes read from the volume, at the Vserver level	b per sec
read_ops	Aggregated number of reads to the volume, at the Vserver level	per sec
total_ops	Aggregated number of operations performed by the volume, at the Vserver level	per sec
write_data	Aggregated bytes written to the volume, at the Vserver level	b per sec
write_ops	Aggregated number of writes to the volume, at the Vserver level	per sec

### volume:node object (clustered environments only)

Counter name	Description	Unit
other_ops	Aggregated number of other operations to the volume at the Vserver level	per sec
read_data	Aggregated bytes read from the volume, at the Vserver level	b per sec
read_ops	Aggregated number of reads to the volume, at the Vserver level	per sec

<b>Counter name</b>	<b>Description</b>	<b>Unit</b>
total_ops	Aggregated number of operations performed by the volume, at the Vserver level	per sec
write_data	Aggregated bytes written to the volume, at the Vserver level	b per sec
write_ops	Aggregated number of writes to the volume, at the Vserver level	per sec
avg_latency	Average latency in microseconds for the WAFL file system to process all the operations on the volume; not including request processing or network communication time	microsec
cifs_other_latency	Average time for the WAFL file system to process other CIFS operations to the volume; not including CIFS protocol request processing or network communication time which will also be included in client observed CIFS request latency	microsec
cifs_other_ops	Number of other CIFS operations to the volume	per sec
cifs_read_latency	Average time for the WAFL file system to process CIFS read requests to the volume; not including CIFS protocol request processing or network communication time which will also be included in client observed CIFS request latency	microsec
cifs_read_ops	Number of CIFS reads to the volume	per sec

Counter name	Description	Unit
cifs_write_latency	Average time for the WAFL file system to process CIFS write requests to the volume; not including CIFS protocol request processing or network communication time which will also be included in client observed CIFS request latency	microsec
cifs_write_ops	Number of CIFS writes to the volume	per sec
flexcache_other_ops	Number of other FlexCache operations to the volume	per sec
flexcache_read_ops	Number of FlexCache read operations from the volume	per sec
flexcache_write_ops	Number of FlexCache write operations to the volume	per sec
nfs_other_latency	Average time for the WAFL file system to process other NFS operations to the volume; not including NFS protocol request processing or network communication time which will also be included in client observed NFS request latency	microsec
nfs_other_ops	Number of other NFS operations to the volume	per sec
nfs_read_latency	Average time for the WAFL file system to process NFS protocol read requests to the volume; not including NFS protocol request processing or network communication time which will also be included in client observed NFS request latency	microsec
nfs_read_ops	Number of NFS reads to the volume	per sec

Counter name	Description	Unit
nfs_write_latency	Average time for the WAFL file system to process NFS protocol write requests to the volume; not including NFS protocol request processing or network communication time which will also be included in client observed NFS request latency	microsec
nfs_write_ops	Number of NFS writes to the volume	per sec
other_latency	Average latency in microseconds for the WAFL file system to process other operations to the volume; not including request processing or network communication time	microsec
read_latency	Average latency in microseconds for the WAFL file system to process read request to the volume; not including request processing or network communication time	microsec
san_other_latency	Average time for the WAFL file system to process other block protocol requests to the volume; not including block protocol request processing or network communication time which will also be included in client observed block protocol request latency	microsec
san_other_ops	Number of other block protocol operations to the volume	per sec

Counter name	Description	Unit
san_read_latency	Average time for the WAFL file system to process block protocol read requests to the volume; not including block protocol request processing or network communication time which will also be included in client observed block protocol request latency	microsec
san_read_ops	Number of block protocol reads to the volume	per sec
san_write_latency	Average time for the WAFL file system to process block protocol write requests to the volume; including block protocol request processing or network communication time which will also be included in client observed block protocol request latency	microsec
san_write_ops	Number of block protocol writes to the volume	per sec
write_latency	Average latency in microseconds for the WAFL file system to process write request to the volume; not including request processing or network communication time	microsec

## List of CLI commands

You must be aware of some CLI commands in order to perform certain operations such as creating a view, modifying thresholds, listing counters, and managing performance diagnostics, in Performance Advisor.

The CLI commands in the following table are applicable to both 7-Mode and clustered environments:

CLI command	Description
<code>dfm perf counter list</code>	Lists the performance counters for the storage object

<b>CLI command</b>	<b>Description</b>
<code>dfm perf threshold list</code>	Lists the performance thresholds
<code>dfm perf threshold create</code>	Creates the performance thresholds
<code>dfm perf threshold delete</code>	Deletes the performance thresholds
<code>dfm perf threshold refresh</code>	Refreshes the performance thresholds
<code>dfm perf threshold modify</code>	Modifies the performance thresholds
<code>dfm perf threshold filter list</code>	Lists the performance thresholds based on filter
<code>dfm perf data list</code>	Lists information about all the counter groups
<code>dfm perf data describe</code>	Describes the counter group
<code>dfm perf data retrieve</code>	Retrieves the performance data of the storage object
<code>dfm perf view describe</code>	Describes the performance views
<code>dfm perf view list</code>	Lists the performance views

<b>CLI command (7-Mode environments only)</b>	<b>Description</b>
<code>dfm perf view create</code>	Creates a view
<code>dfm perf view counter add</code>	Adds a performance counter
<code>dfm perf view counter delete</code>	Deletes a performance counter
<code>dfm perf view chart add</code>	Adds a performance chart
<code>dfm perf view chart delete</code>	Deletes a performance chart
<code>dfm perf view destroy</code>	Destroys the performance view
<code>dfm perf template create</code>	Creates the threshold templates
<code>dfm perf template detach</code>	Removes the threshold templates
<code>dfm perf template attach</code>	Attaches the threshold templates
<code>dfm perf template list</code>	Lists the threshold templates
<code>dfm perf template delete</code>	Deletes the threshold templates
<code>dfm perf template modify</code>	Modifies the threshold templates
<code>dfm perf template threshold add  modify</code>	Modifies the threshold template

<b>CLI command (7-Mode environments only)</b>	<b>Description</b>
dfm perf export counter list add delete	Manages data export for counter groups
dfm perf data modify	Modifies the data collection configuration
dfm perf data export	Manages data export
dfm perf data enable disable	Enables or disables the counter group
dfm perf diag	Manages performance diagnostics
dfm perf clientstats	Manages client statistics
dfm perf clientstat collect	Collects the client statistics
dfm perf clientstat list	Lists the client statistics
dfm perf clientstat purge	Removed the client statistics that was collected
dfm perf data copy	Copies the data collection configuration

## What access permission is

Access permissions allow you to customize views, change storage system settings, set event thresholds, and configure events and alarms.

You can use role-based access control (RBAC) to grant access to the user. The access to resources is defined and controlled based on the role or job function of a user.

### RBAC for configuring views (7-Mode environments only)

You must be aware of the capabilities you require to configure custom views for the objects you are monitoring.

The following table lists the tasks you can perform to configure views and the required capabilities:

Task	Capability	Object
View the performance data of a counter in a view	Database Read	Managed object associated with the counter instance in the view
Create a custom view	PerfView Write	Global
Modify a custom view: Add a counter	PerfView Write	Global
Modify a custom view: Remove a counter	Database Read	Managed object associated with the counter instance in the view
Modify a custom view: Rename a view	PerfView Write	Global
Delete a custom view	PerfView Delete	Global
View real-time performance data	PerfView RealTimeRead <b>Note:</b> Requires the Database Read Capability	Global

### RBAC for modifying storage system settings (7-Mode environments only)

You must be aware of the capabilities you require to configure the storage system settings.

The following table lists the tasks and the required capabilities for modifying the storage system settings:

<b>Task</b>	<b>Capability</b>	<b>Object</b>
Modify a custom view: <ul style="list-style-type: none"> <li>• Change credentials</li> <li>• Change the transport protocol</li> </ul>	Database Write	Storage system

## RBAC for setting thresholds

The tasks and capabilities available for storage objects are based on the RBAC settings. You can create, view, or edit thresholds based on the RBAC.

The following table lists the tasks and the capabilities related to the threshold operations, and the objects for which you can perform these operations:

<b>Task</b>	<b>Capability</b>	<b>Object</b>
You can create or edit thresholds on the counters of the following objects: <ul style="list-style-type: none"> <li>• (clustered environments only) Vservers</li> <li>• (clustered environments only) Nodes</li> <li>• (7-Mode environments only) vFiler units</li> <li>• (7-Mode environments only) Qtrees</li> <li>• (7-Mode environments only) Targets</li> <li>• Aggregates</li> <li>• Volumes</li> <li>• LUNs</li> <li>• Disks</li> <li>• Network interfaces</li> </ul>	Database Write	On each instance of the object

Task	Capability	Object
<p>You can view thresholds on the counters of the following objects:</p> <ul style="list-style-type: none"> <li>• (clustered environments only) Vservers</li> <li>• (clustered environments only) Nodes</li> <li>• (7-Mode environments only) vFiler units</li> <li>• (7-Mode environments only) Qtrees</li> <li>• (7-Mode environments only) Targets</li> <li>• Aggregates</li> <li>• Volumes</li> <li>• LUNs</li> <li>• Disks</li> <li>• Network interfaces</li> </ul>	Database Read	On each instance of the object
<p>You can create or edit thresholds on the counters of all the storage objects, such as the following:</p> <ul style="list-style-type: none"> <li>• (clustered environments only) Vservers</li> <li>• (clustered environments only) Nodes</li> <li>• (7-Mode environments only) vFiler units</li> <li>• (7-Mode environments only) Qtrees</li> <li>• (7-Mode environments only) Targets</li> <li>• Systems</li> <li>• NFSv3</li> <li>• CIFS</li> <li>• FCP</li> <li>• iSCSI</li> </ul>	Database Write	Storage systems

<b>Task</b>	<b>Capability</b>	<b>Object</b>
<p>You can view thresholds on the counters of all the storage objects, such as the following:</p> <ul style="list-style-type: none"> <li>• (clustered environments only) Vservers</li> <li>• (clustered environments only) Nodes</li> <li>• (7-Mode environments only) vFiler units</li> <li>• (7-Mode environments only) Qtrees</li> <li>• (7-Mode environments only) Targets</li> <li>• Systems</li> <li>• NFSv3</li> <li>• CIFS</li> <li>• FCP</li> <li>• iSCSI</li> </ul>	Database Read	Storage systems

## **RBAC for threshold templates (7-Mode environments only)**

You must be aware of the capabilities required to configure threshold templates by using role-based access control (RBAC).

The following table lists the threshold template operations that you can perform on objects, the capabilities you require, and the objects on which you can perform the operation:

<b>Task</b>	<b>Capability</b>	<b>Object</b>
Create or edit threshold templates	PerfThreshTemplate Write	
View threshold templates	PerfThreshTemplate Read	

<b>Task</b>	<b>Capability</b>	<b>Object</b>
Apply or remove a threshold template on the following objects: <ul style="list-style-type: none"> <li>• Storage system or a group of storage systems</li> <li>• Aggregate</li> <li>• Volume</li> <li>• Qtree</li> <li>• LUN</li> <li>• Disk</li> <li>• Network interface</li> <li>• vFiler units</li> <li>• Targets</li> </ul>	Database Write	On each instance of the object

## RBAC for configuring events (7-Mode environments only)

You must be aware of the capabilities you require to configure events for the objects you are monitoring. You can configure events by using role-based access control (RBAC).

The following table lists the capabilities required to configure threshold templates:

<b>Task</b>	<b>Capability</b>	<b>Object</b>
View an event	Event Read	Source of the event
Delete an event	Database Write	Source of the event
Acknowledge an event	Event Write	Source of the event

## RBAC for configuring alarms (7-Mode environments only)

You must be aware of the capabilities you require to configure alarms for the objects you are monitoring.

The following table lists the tasks you can perform to configure alarms and the required capabilities:

<b>Task</b>	<b>Capability</b>	<b>Object</b>
Creating an alarm	Alarm Write	Group associated with the alarm
Modifying an alarm	Alarm Write	Group associated with the alarm

<b>Task</b>	<b>Capability</b>	<b>Object</b>
Deleting an alarm	Alarm Delete	Group associated with the alarm
Listing all alarms	Alarm Read	Group associated with the alarm

## Requirements to install Performance Advisor

---

Before you use Performance Advisor, you must install NetApp Management Console and ensure that the prerequisites are met.

The prerequisites to access Performance Advisor are as follows:

- The NetApp Management Console must be installed.
- The performance-monitoring server must be enabled.
- The DataFabric Manager server must be installed.
- You must install Data ONTAP 6.5 or later on all storage objects and the hosts of all the vFiler units for which you want to monitor performance data.
- You must display the storage objects and vFiler units for which you want to monitor performance data to the DataFabric Manager server.

**Note:** For details about downloading and installing the NetApp Management Console, see the *OnCommand Unified Manager Installation and Setup Guide*. When upgrading to DataFabric Manager server 3.6 or later, the application graphs that show the calculated statistics display data for the period after the upgrade.

## Enabling the performance-monitoring server

Before you start NetApp Management Console and log in to Performance Advisor, you must enable the performance-monitoring server.

### Steps

1. In the Operations Manager console, select **Control Center > Setup > Options > Performance Advisor**.

The Performance Advisor options are displayed.

2. If NetApp Management Console is disabled, from Performance Advisor **Options**, select **Performance Advisor Enabled > Enabled**.

You can perform this task if the performance-monitoring server is disabled.

3. Click **Update**.

## Setting up transport protocols between the performance-monitoring server and Performance Advisor

By default, both HTTP and HTTPS are enabled as transport protocols between the performance-monitoring server and Performance Advisor. You can change the transport protocol and

performance-monitoring server ports by using the Performance Advisor options in the Operations Manager console.

### Steps

1. In the Operations Manager console, select **Control Center > Setup > Options > Performance Advisor** to display the Performance Advisor options.
2. Select one or more of the following options to accept or modify the settings as appropriate to your environment:
  - **Server HTTP Port**  
This option sets the port used by the performance-monitoring server to receive HTTP connections from the application. The default value is 8088.
  - **Server HTTP Enabled**  
This option enables or disables HTTP as a transport protocol used by the application. The default value is Yes.
  - **Server HTTPS Port**  
This option sets the port used by the performance-monitoring server to receive HTTPS connections from the application. The default value is 8488.
  - **Server HTTPS Enabled**  
This option enables or disables HTTP as a transport protocol used by the application. The default value is Yes.
3. Click **Update**.

## Setting up appliance-level transport between Performance Advisor and monitored devices

You can edit the **Performance Advisor Transport** setting for an individual storage system or a vFile host by using the Operations Manager console. You can specify whether the individual device can use HTTP only or use both HTTP and HTTPS as the transport protocols between Performance Advisor and the performance-monitoring server.

### Steps

1. Click the name of the device in the Operations Manager console.
2. Click **Edit Settings**.
3. Select the options you want from the **Performance Advisor Transport** list.
4. Click **Update**.

## Setting up transport protocols between Performance Advisor and monitored devices

You can set up transport protocols between Performance Advisor and monitored devices by enabling both HTTP and HTTPS or enabling HTTPS only as transport protocols in Operations Manager console.

### Before you begin

There must be no conflicting transport setting between Performance Advisor and the individual storage systems.

### Steps

1. In the Operations Manager console, select **Control Center > Setup > Options > Performance Advisor** to display the Performance Advisor options.
2. Select one of the following **Performance Advisor Transport** options to accept or modify the settings as appropriate to your environment:

- **httpOnly**  
Specifies HTTP only as the global transport protocol between the performance-monitoring server and all the monitored devices. This is the default setting.
- **httpsOk**  
Enables both HTTP and HTTPS as global transport protocols between the performance-monitoring server and all the monitored devices.

**Note:** When the transport protocol for the host is HTTPS, you must not set the **Performance Advisor Transport** option to HTTP.

3. Click **Update**.

# Getting started with the Performance Advisor user interface

---

By using the NetApp Management Console, you can login to the DataFabric Manager server to access and start or stop the Performance Advisor application.

## Starting Performance Advisor

You can start monitoring the performance of storage objects and systems by starting Performance Advisor from the NetApp Management Console.

### Steps

1. Click **Start > All Programs > NetApp > Management Console**.
2. Enter the fully qualified domain name, user name, and the password for the DataFabric Manager server you want to log in to.

The user name, domain name, transport, and port number from your previous login session are saved. Therefore, if you are logging in as the same user as before, you have to enter only your password.

3. Select **HTTP** or **HTTPS** transport.

The default port is selected automatically. If you log in using any other port, you must set the serverHTTPSPort option to the matching port.

4. Click **Connect**.
5. Click **Manage Performance** to display the top-level groups configured for the DataFabric Manager server that you have logged in to.

## Disconnecting from Performance Advisor

You can stop Performance Advisor when you have completed the performance analysis of the storage objects in your environment by closing NetApp Management Console.

### Step

1. From the menu, Select **File > Exit**.

## Storage objects unavailable in Performance Advisor

Some storage objects might be unavailable in Performance Advisor under certain circumstances. Storage objects that are not available are displayed in the Set Up Storage Systems window in 7-Mode

environments, and the Set Up Cluster window in clustered environments, and not in the View navigation pane.

Storage objects might be unavailable under the following conditions:

- Storage objects are running Data ONTAP versions earlier than 6.5.
- The DataFabric Manager server is not managing storage objects.
- Data collection from the DataFabric Manager server by the application is not enabled.
- You do not have sufficient access privileges to these storage objects.
- If the login credentials used to access the storage system are incorrect, Performance Advisor will not continue data collection.
- If there is a mismatch in the protocols (perfadvisortransport) used by the performance monitoring server and the storage system.

## Unavailable menu options in the Performance Advisor interface

The availability of menu options in the Performance Advisor interface is determined by your DataFabric Manager server administrator roles. Options that are dimmed are not available to you for the storage system or vFiler unit you have currently selected.

## Zero-value data in a Performance Advisor chart

When the performance-monitoring server sends nothing but zeros to Performance Advisor for the counter or counters in a chart, this is called *zero-value data*.

Zero-value data is displayed for any counters monitoring protocols that are not enabled on the storage system or vFiler unit. A chart displaying only zero-value data shows a vertical axis numbered from 0 to 1, and vertical lines, but no graph.

## Lack of data in a Performance Advisor chart

If a chart does not contain any data, it indicates that the performance-monitoring server has not sent any data to Performance Advisor for the counters in the chart for the period displayed.

An empty chart indicates that you cannot access the data. This situation is unlikely, unless one of the following conditions is true:

- You are viewing SnapMirror counters for a storage system that does not have a SnapMirror license.
- If LUNs are not available, then the "Top N luns" chart does not display any data.
- If qtrees are not available, then the "Top qtrees in a dataset" chart does not display any data.

- If the FlexShare option is turned off, then the "Priority queue" chart does not display any data.
- Performance Advisor has not collected any performance data.  
You can verify this by using the `dfm perf data retrieve` command.

## Display of new storage objects in Performance Advisor

When the DataFabric Manager server discovers new storage systems or clusters, or when you manually add storage systems or clusters, you must refresh the display for the application to list the new devices.

You must press F5 to refresh the display.

# Overview of the NetApp Management Console dashboard

---

The NetApp Management Console provides an overview of various aspects of your data management environment, including monitoring information.

**Monitor dashboard** The Monitor dashboard in Performance Advisor displays information about the current overall performance status of your systems, such as performance events, top storage systems by the total number of operations, top storage systems by network throughput, top storage systems by CPU utilization, Top Nodes by CPU Utilization and Top Vservers by Total Ops. You can modify the default settings to configure any view on the global group as a dashboard.

## Dashboard panel descriptions

The dashboard panels provide a cumulative at-a-glance status information about your system.

### Performance Advisor dashboard

You can view more details about the Performance Advisor dashboard by clicking  in the dashboard panel title bar.

### Dashboard panels (clustered environments only)

<b>Top Performance Events</b>	Displays the five events with the highest severity levels. Items are ordered first by severity, then by time that they occurred. More detail about each event is provided in <b>Monitor &gt; Events</b> .
<b>Top Nodes by CPU Utilization</b>	Displays a bar chart of the top five nodes that are discovered and monitored by the DataFabric Manager server, and sorted by the highest CPU utilization. The vertical axis displays the percentage of CPU utilization for that node. The horizontal axis displays the node name.
<b>Top Vservers by Total Ops</b>	Displays a bar chart of the top five Vservers that are discovered and monitored by the DataFabric Manager server, and sorted by the highest total operations. The vertical axis displays the total operations per second for that Vserver. The horizontal axis displays the Vserver name.

## Dashboard panels (7-Mode environments only)

<b>Top Performance Events</b>	Displays the five events with the highest severity levels. Items are ordered first by severity, then by time that they occurred. More detail about each event is provided in <b>Monitor &gt; Events</b> .
<b>Top Storage Systems by Network Throughput</b>	Displays a bar chart of the top five storage systems, sorted by the highest network throughput. The number above each bar chart displays the exact value of the throughput per second from that system. The vertical axis displays the megabytes of throughput per second. The horizontal axis displays the name of the storage system.
<b>Top Storage Systems by Total Ops</b>	Displays a bar chart of the top five storage systems, sorted by the highest total operations. The vertical axis displays the total operations per second for that storage system. The horizontal axis displays the storage system name.
<b>Top Storage Systems by CPU Utilization</b>	Displays a bar chart of the top five storage systems, sorted by the highest average CPU utilization. The number above each bar chart displays the exact value of the throughput per second from that system. The vertical axis displays the percentage CPU usage of the storage system. The horizontal axis displays the name of the storage system.

## What events are

Events are generated automatically when a predefined condition occurs or when an object crosses a threshold. These events enable you to take action to prevent issues that can lead to poor performance and system unavailability. Events include an impact area, severity, and impact level.

Events are categorized by the type of impact area they encompass. Impact areas include availability, capacity, configuration, or protection. Events are also assigned a severity type and impact level that assist you in determining if immediate action is required.

You can configure alarms to send notification automatically when specific events or events of a specific severity occur.

Events are automatically logged and retained for a default of 180 days.

Event types are predetermined. You can manage event notification, but you cannot add or delete event types. However, you can modify the event severity by using the command-line interface.

## Configuring events

You can learn about event occurrences by viewing the event log or by configuring alarms to automatically notify you when events occur.

- Viewing the event log

You can use the Events window to view a list of all the events that occurred and to view detailed information about any selected event.

- Configuring alarms

You can use the Alarms window to add an alarm that sends notifications automatically when an event occurs.

## Monitoring events

You can view a list of all the events that occurred and view detailed information about any event. You can also view events that are marked for deletion.

### Before you begin

You must be authorized to perform all the steps of this task; your RBAC administrator can confirm your authorization in advance.

### Steps

1. You can monitor events from the NetApp Management Console or Performance Advisor.

To monitor events from...	Do this...
The NetApp Management Console	From the menu bar, click <b>Notifications &gt; Events</b> .
Performance Advisor	From the menu bar, click <b>Monitor &gt; Events</b> .

2. Optional: Customize the **Events** window in one of the following ways:

- Select an event to view details about that event.
- Click  in the column header to control the event entries that you want displayed.
- Click the sort arrows in the column header to change the sort order of the entries in that column.
- Click  in the upper-right corner of the list to select which columns are displayed.
- Drag the bottom of the events list area up or down to resize that area.

3. Optional: View the events that are marked for deletion by displaying hidden columns and removing a text filter, as follows:

- a) Click  in the upper-right corner of the list and select the **Deleted By** and **Deleted Time** columns.
- b) Click  in the **Deleted By** column header and delete the default search string.

The default filtering of deleted events is stopped and the deleted event entries are displayed in the list.

## Responding to and acknowledging events

When an event occurs, you must take appropriate action to acknowledge and manage it and correct the problem. Responding to an event includes viewing it, acknowledging it, and correcting the problem.

### Before you begin

You must be authorized to perform all the steps of this task; your RBAC administrator can confirm your authorization in advance.

### Steps

1. From the menu bar, click **Notifications > Events**. For Performance Advisor, from the menu bar, click **Monitor > Events**.
2. In the **Events** window, select an event to view the details about it.
3. Select an event and click **Acknowledge** to indicate that you are taking responsibility for managing that event.
4. In the Acknowledge Events dialog box, click **Yes** to acknowledge the selected event.  
Your user name and the time are entered in the Events list for the selected event.
5. Find the cause of the event and take corrective action.

## Deleting events

You can delete an event from the event list. Typically, you delete an event only after you acknowledge it and resolve the problem. However, you can also delete unacknowledged events if they are not important.

### Before you begin

You must be authorized to perform all the steps of this task; your RBAC administrator can confirm your authorization in advance.

### Steps

1. For protection, provisioning, or disaster recovery events, from the menu bar, click **Notifications > Events**. For Performance Advisor events, from the menu bar, click **Monitor > Events**.
2. In the **Events** window, select an event and click **Delete**.
3. In the Delete Events dialog box, click **Yes** to delete the selected event.
4. Verify that the event is deleted by viewing the **Events** window.

**After you finish**

You can view events that are marked for deletion by clicking  in the corner of the list.

# Views in Performance Advisor

---

You can use views in Performance Advisor to analyze and interpret performance data.

## What the performance view window is

The performance view window enables you to view the performance data of the selected group or the object in the hierarchy.

## What predefined views are

Predefined views are default and system-generated views that are available in Performance Advisor. You can use predefined views to view performance data, which is collected by the performance-monitoring server and displayed in Performance Advisor.

You cannot edit or delete predefined views. However, in 7-Mode systems, you can save a copy of the predefined view and create a custom view.

For example, you might want to monitor the physical objects with the most performance. The default view is Storage System Summary View. Using the Views list, you can set the Storage System - Top Physical Objects view for the storage systems to be displayed as the default view. The Storage System Summary View is no longer the default view that appears when you click the storage systems.

**Note:** If you change the default view of the global group, then the Dashboards window uses the new view to display the panels.

## What custom views are (7-Mode environments only)

You can create custom views through the Performance Advisor interface so that you can monitor one or more specific storage objects. In a single custom view, you can add multiple counters from a single chart or multiple charts. By default, custom views are associated with the Global group.

You can combine any counters you want for display in a single view. Additionally, you can include multiple counters in a single chart, and multiple charts in a single view. By default, custom views are associated with the Global group.

**Note:** Although you can combine any counters in a single chart, if you combine counters with different units, the chart displays multiple vertical (“y”) axes with the respective unit labels of the counters. For example, combining the `disk_data_read` counter (KB per second) with the `processor_busy` counter (percentage) results in a chart with multiple vertical (“y”) axes, where each axis displays the respective unit label of the counter.

**Note:** On upgrading to the DataFabric Manager server 3.6 or later, multiple custom views with the same name in the earlier versions of Performance Advisor are displayed in the `view name>_view Id` format. For example, if there are multiple custom views with the same name `cv1`, then after the

upgrade, these custom views are shown in the *cvI\_view Id* format. Because the **view Id** is unique, the custom view name is unique after the upgrade.

You can create custom views to perform the following actions:

- Access real-time data, other than what appears in the default view
- Group counters into combinations that are not offered by default views
- Use a chart type different from the charts in the default view

You can temporarily select a different chart type in a default view through the right-click menu. However, the view returns to the default chart type each time you invoke it from the navigation pane.

## What advanced views are

Advanced views enable you to view the performance data based on statistical parameters for a period of time. You can set parameters such as minimum, maximum, mean, and percentile on the collected data for further consolidation.

These views enable you to set the baseline for data collection and thus help you to set appropriate thresholds. The following are the three types of computations that are applicable to the statistical parameters:

- **Simple**  
This is a single value of the statistical parameter for the whole period of time. A horizontal line is displayed in the view.
- **Step**  
The values are accumulated for a specified period. This calculation yields multiple values and displays a series of horizontal lines in steps.
- **Rolling**  
The values are accumulated for a specified period in regular intervals. This calculation yields multiple values and displays smoothened lines.

The statistical computations are based on the Boost.Accumulators library.

**Note:** Computation types in advanced views are calculated based on the unconsolidated performance data. In the other views, data is graphically represented based on the consolidated performance data (using the performance settings.) Therefore, the baseline might not meet the graph in the advanced views. This might result in inconsistencies in the advanced views.

### Related information

*Accumulators:* [www.boost.org/doc/libs/1\\_38\\_0/doc/html/accumulators.html](http://www.boost.org/doc/libs/1_38_0/doc/html/accumulators.html)

## Types of data in Performance Advisor

You can use *historical data* for diagnosing past performance problems or for short-term trend analysis, and you can use *real-time data* (7-Mode environments only) for diagnosing immediate performance issues by either saving or exporting the data for analysis.

The following types of data are available in Performance Advisor:

- **Historical data**  
Historical data is data that is archived on the DataFabric Manager server. The data is collected on an ongoing basis, irrespective of whether the performance view is open.
- **Real-time data (7-Mode environments only)**  
Real-time data is data that is sent through the performance-monitoring server and displayed in Performance Advisor. The data is collected only as long as a performance view displaying it is open in the Performance Advisor interface. Unlike historical data, real-time data is not stored.

**Note:** In clustered environments, when you move a volume from one aggregate to another aggregate within the same node, or between aggregates of different nodes, Performance Advisor does not retain the historical data.

## Logical and physical objects hierarchy

You can view the hierarchy of logical and physical objects in the navigation tree from the navigation pane. By default, the hierarchy of logical objects hierarchy is displayed in the navigation pane.

For clustered environments, the logical hierarchy displays clusters at the top level, which in turn displays Vservers, LUNs, and volumes.

The physical hierarchy includes the cluster, nodes, disks, LUNs, processors, and aggregates.

## Viewing historical data

You can view and analyze the historical data by selecting the time range on a chart. You can update the time range on all charts by synchronizing the time axes.

### Steps

1. From the **View** tab, select a view from the **Available Views** list.
2. Select the chart in a view.
3. Click **Range > Custom**.
4. Edit **Start Date** and **End Date**.
5. Click **Ok**.

### Result

The chart is refreshed to display the historical data for the time range specified.

## What synchronizing time axes is

You can synchronize the axes when you want the time axes of all line charts in a view to be in sync. It helps in detecting performance blockage by interpreting data through views.

For example, if you observe a spike in one of the charts in the Summary View window, you can probe further by interpreting data in the related charts of the window. You must synchronize the time axes on all charts to investigate the data for a particular time period.

## Viewing historical data

You can view the historical data of an object by selecting the object in the navigation tree.

### About this task

You can also view the performance data of an object by using the Open View wizard.

### Steps

1. From the menu bar, click **View**.
2. Expand the storage objects in the navigation tree to view the storage objects (child objects) within them.

The parent object displays a tree of objects.

3. Click the object for which you want to view the data.

The default view of the selected object is displayed.

**Note:** You can change the default view by using the **Set Default** button.

## Displaying tabbed views

You can view the performance data of multiple groups or objects at the same time using tabbed views.

### Steps

1. From the menu bar, click **View**.
2. Right-click an object in the navigation pane.
3. Click **Open in New Tab**.

## Selecting a performance view

You can select a performance view from a list to view the performance view of your choice. The **Available views** list in performance view window displays a list of various types of performance views.

### Step

1. In the **Summary View** window, select the view from the **Available Views** list.

## Closing a performance view

You can close any current view by using the **x** icon.

### Step

1. Click the **x** icon.

## Actions you can perform in the performance views

You can view and analyze data in performance views by using charts. You can perform many actions in performance views such as list storage objects, manage the performance charts, add a counter and threshold.

You can view and analyze either 7-Mode or cluster data by performing the following actions on performance charts:

- List all related objects using the arrow icon in the upper-right corner of the title bar in the chart. Clicking the arrow displays a tree view of objects related to the content of the chart.
  - Note:** In clustered environments, LUNs are not displayed as related objects for nodes.
- Select the range of data to be displayed, such as performance details collected for the past one hour.
- Zoom in to the chart by 10%.
- Zoom out of the chart by 10%.
- Reset the axes.
- Add one or more thresholds.
- Save as an image file.
- Print the chart.

In addition, you can perform the following actions in 7-Mode environments only:

- Plot the Performance Advisor events on the chart and identify the cause of the increased rates or decreased throughput.
  - You can identify the nature of the event by moving the pointer over the plotted event.
- Add one or more counters.
  - In a custom view, when you stop the data collection, the historical view chart displays a blank space from the point of time the data collection was stopped. When the data collection is

restarted, the polyline graph connects the point at which the data collection was stopped to the point where the data collection is restarted. To identify the break in the data collection, you should go to the respective scatter graph to know whether there is any disconnection.

If a chart contains managed objects and unmanaged objects, the tree view of the object that is displayed in that particular chart displays only the managed objects. The tree view is blank if any chart contains unmanaged objects.

You can maximize or minimize the chart by double-clicking its title. Any view that contains only one chart is always maximized.

## Viewing the time period in a chart

You can view the performance details for the selected portion of time by moving the time period axis.

### About this task

The screen resolution determines the amount of data that is displayed (as opposed to the entire range of data you can scroll to). Therefore, resizing a chart does not increase or decrease the amount of data you can view; it only increases or decreases the number of pixels per data point. The zoom buttons help you compress or lengthen the time scale and modify the time period that is displayed in the chart.

### Step

1. View the performance data by clicking the appropriate button near the Show Threshold check box.

## Resetting both axes

You can reset the axes in any chart of a view. The “x” or horizontal axis represents time in line charts and objects in bar charts. The units on the “y” or vertical axis vary, depending on the counters included in the chart.

### Step

1. Click **Action > Reset Both Axes**.

Alternatively, right-click anywhere in the chart and click **Reset Both Axes**.

## Synchronizing time axes

You can synchronize the time axis in charts by using **Performance Settings** and activating **Synchronize** in a view.

### Steps

1. Click the **Performance Settings** icon in the menu bar.
2. Select one of the following options to accept or modify the settings:

- Synchronize all charts in a view
  - Synchronize all charts across all views
3. Click **View** and select a view from **Available views**.
  4. Click **View Actions > Synchronize**.

## Undoing synchronization of time axes

You can undo the synchronization of the time axis in charts by using **Undo synchronize** in a view.

### Steps

1. Click **View** and select a view from **Available views**.
2. Click **View Actions > Undo synchronize**.

## How to use the legend for predefined views and custom views

You can use the legend in predefined views to interpret the performance data that is displayed. Each performance view includes a legend.

The legend for a predefined view contains the following information:

- A sample of the graph color
- The name of the counter
- Unit of x-axis
- Unit of y-axis

In addition to the above, the legend for a custom view includes the name of the storage object, subsystem, or group of storage object units from which the data is collected

Using the legend, you can select the counters that you want to view in the performance chart.

## How to view thresholds

You can view thresholds along with the performance data for a counter using views.

You can select the **Show thresholds** check box located next to the **Show legends** check box to view thresholds. The dotted lines that appear in the chart indicate the threshold values.

## Creating advanced views

You can create advanced views for any storage system by using the View window, to gather additional information about the storage system performance.

### Steps

1. From the NetApp Management Console navigation pane, click **View**.
2. Select the storage system for which you want to create the advanced view.
3. Click **View Actions > Metrics**.

4. Click **Metric Settings**.
5. Select metric and computation types with period settings.
6. Click **Add metric** and then click **Ok**.
7. Click **Filter Settings**.
8. Specify the time and day of the week and click **Ok**.

## Adding thresholds using a view

You can use a view to add thresholds for the counters displayed on the chart.

### Steps

1. Click **View** and select a view from **Available views**.
2. Right-click the chart.
3. Move the pointer over **Add Threshold** and click a counter.

## Changing the chart type

You can identify the breaks in data collection by changing the type of chart.

### Steps

1. Display the performance view.
2. Right-click the chart.
3. Move the pointer over **Chart Type** and click **Scatter Chart**.

## Pausing data collection

You can play or pause the data collection if you want to examine a graph in detail. This is useful if the graph is updated frequently.

### Steps

1. Select a view from **View > Available views**.
2. Click **View Actions**.
3. Click **Pause** once to pause data collection.

However, the DataFabric Manager server does not stop collecting data.

4. Click **Play** to restart the data collection.

## Printing a chart from a view

You can print a chart by clicking in the view.

### Steps

1. Identify the performance view that you want to print and right-click in the chart.
2. Click **Print**.
3. Specify the name of the printer and click **Ok**.

## Enabling charts to scale the y axis

You can enable charts to scale the vertical axis automatically for best view during various periods of data collection.

### Steps

1. Display the performance view.
2. Right-click in the chart.
3. Click **Auto Scale Y-Axis**.

## Diagnosing a performance issue (7-Mode environments only)

If the storage system is facing a performance bottleneck, you can diagnose the performance issue by checking the health of Data ONTAP, network, NAS, and SAN.

### About this task

During the diagnosis of a storage system, Performance Advisor investigates the following: Data ONTAP, Network, NAS, and SAN.

### Steps

1. From the menu bar, click **View**.
2. Open a performance view of a storage system.
3. Click **View Actions**.
4. Click **Diagnose**.
5. Select the time for which you want to collect data.
6. Click **Diagnose**.

**After you finish**

After Performance Advisor diagnosis the performance issue, it provides observations and recommendations for each category. You must check the details of each category and act on the recommendations, if necessary.

## Performance monitoring with custom views (7-Mode environments only)

Custom views enable you to display data in combinations or styles, depending on your requirements. For example, you might want to monitor a single counter across several storage systems or vFiler units. You might want to use predefined views to view counter combinations, but in a different type of chart.

### When must you create a custom view (7-Mode environments only)

You must create a custom view if you want to access real-time data, display counters in combinations that are not offered by predefined views, use chart types different from that of predefined views, and use different views to compare the performance of the same counter on different objects.

You can temporarily select a different chart type in a predefined view through the right-click menu. However, the view returns to the default chart type each time you open it from the Performance Views panel.

### How data from counters is displayed (7-Mode environments only)

Counter data is shared across different views. Any data collected for a counter in other performance views is displayed in a new view. When you add a counter to a performance view, if data collection is enabled for this counter in another view, then the new view displays the data collected in the other view.

### Viewing real time data (7-Mode environments only)

You can access and view real-time data from Performance Advisor. By default, all the performance views display historical data in Performance Advisor.

**About this task**

**Note:** Real-time data collection can increase storage system CPU utilization, which might negatively impact the performance of the storage system.

**Steps**

1. From the **View** tab, select a view from the **Available Views** list.
2. Click **View Actions > Real Time**.
3. Select **Real Time**.

4. Select **Sample Rate** and **Retention Period**.
5. Click **Ok**.
6. Click **Yes** to the Performance Warning message.

## Creating a custom view (7-Mode environments only)

You can create a custom view with selected counters in bar and line charts, to analyze specific parameters in Performance Advisor.

### Before you begin

You must be assigned the DataFabric Manager GlobalWrite and GlobalDelete roles.

### About this task

Although you can combine any counters in a single chart, combining counters with different units results in a chart with multiple vertical (“y”) axes. For example, combining the `disk_data_read` counter (KB per second) with the `processor_busy` counter (percentage) results in a chart with multiple vertical (“y”) axes, where each y axis represents the respective unit labels of the counters.

### Steps

1. Click **Set Up > Custom Views**.
2. Click **Add**.
3. In the **View name** field, type the name of the custom view that you want to create.  
The custom view names should be unique.
4. Select the storage object for which you want the view to be created.
5. Click **Add Chart** so that you can display the data in graphs.  
You can add more than one chart to the view.
6. Select **Show events** to display the top five events for each object that is associated with the view.
7. Click **Add**.

## Opening a custom view (7-Mode environments only)

You can open a custom view in the performance view window to see information about the selected storage object counters. You can open a custom view only for the associated storage object.

### Steps

1. Click **Set Up > Custom Views**.
2. Select or right-click the custom view and click **Open**.

If you create a custom view for a particular storage object, then **Open** is enabled.

## Editing custom views (7-Mode environments only)

You can edit the view name, the chart name, and the counter details in a custom view.

### Before you begin

You must be assigned the GlobalWrite and GlobalDelete roles.

### About this task

You cannot edit predefined views.

### Steps

1. Click **Set Up > Custom Views**.
2. Edit the custom view in one of the following ways:
  - Select the custom view and click **Edit**.
  - Right-click the selected custom view and click **Edit**.
3. In the properties sheet for the selected custom view, click the fields you want to modify, and enter the new values.
4. Click **Apply**.

## Deleting a custom view (7-Mode environments only)

You can delete a custom view from the Custom Views window if it is no longer required.

### Before you begin

You must be assigned the GlobalWrite and GlobalDelete roles.

### About this task

You can delete only custom views, not predefined views.

### Steps

1. Click **Set Up > Custom Views**.
2. Select one or more custom views in the **Custom Views** window and click **Delete**.
3. Click **Ok**.

## CPU utilization limitations on storage systems or vFiler hosts

The performance-monitoring settings might increase the storage system CPU utilization beyond expected levels.

You must check the current CPU utilization level on the storage system or vFiler host before you perform the following operations:

- Enable SecureAdmin on a storage system, which requires the DataFabric Manager server to use HTTPS to monitor performance data
- Switch the data source in views to real time (7-Mode environments only)

## Analysis of real-time data (7-Mode environments only)

You must either save or export the real-time data to analyze it. The real-time data is not archived and exists only when the performance view is displayed.

## Methods for saving performance data

You can save the performance data of a storage object for analysis in Performance Advisor by using the **Save as** option or the **Export** option.

## Saving a chart

You can save the chart of the performance view with details in your directory.

### About this task

**Note:** To get a good result for a .png file with proper details, you should maximize the chart view by double-clicking the title bar of the chart and then save the chart.

### Steps

1. Display the performance view.
2. Right-click the chart.
3. Click **Save as**.
4. Select the directory in which you want to save the chart.
5. Specify the name of the file.
6. Click **Save**.

## Exporting a view to a .csv file

You can export the data from a view to a .csv (comma-separated value) file for analysis.

### About this task

You can export performance data; however, you should be aware of the following limitations:

- Exporting data is disabled for top performance charts.
- If a view has top performance charts and detailed charts (non-top N charts), then the Export dialog box displays only the names of the detailed charts.

### Steps

1. From the menu bar, click the group or the object that you want to view and for which you want to export data.
2. Click the name of the view you want to display.
3. From the **File** menu, select **Export**.
4. Select and specify the date range, the counters, and the date format.

For advanced views, you can specify the metric data that you want to export.

5. Click **Browse**, and specify a file name and the location where you want to save the file.
6. Select **CSV** in the **Files of Type** field to export the data to CSV format.
7. Click **Save**.
8. Click **Ok**.

### Result

The application saves the performance view file with a .csv extension to the location that you specified.

**Note:** You can view the .csv output file format in Microsoft Excel or Lotus Symphony. You can also view this file using common text editors, because the data is in plain-text format.

## Predefined views of logical and physical objects

You can use predefined views to display performance data of physical and logical storage objects, such as storage systems, network interfaces, aggregates, volumes, clusters, and Vservers.

Predefined views are available for the following logical and physical objects:

- Global groups
- Volumes
- Processors

- Network interfaces
- LUNs
- Aggregates
- Disks
- Vservers (clustered environments only)
- Clusters (clustered environments only)
- Nodes (clustered environments only)
- Storage systems (7-Mode environments only)
- vFiler units (7-Mode environments only)
- Datasets (7-Mode environments only)
- Resource pools (7-Mode environments only)
- Qtrees (7-Mode environments only)
- Targets (7-Mode environments only)

## Predefined views at the global or group level

You can display the views at the global or group level to analyze the performance data.

### Group Summary View

This view provides a summary for the entire system or group. This view is displayed in either of the following cases:

- When a user first logs in
- When any group is selected

The following panels are available under this view:

- Top Performance Events  
Counters are not applicable for this panel.
- (7-Mode environments only) Top Storage Systems by Network Throughput  
Displays the `load_total_mbps` counter, which is calculated using the following formula:  

$$\text{load\_total\_mbps} = \text{load\_inbound\_mbps} + \text{load\_outbound\_mbps}$$

$$\text{load\_inbound\_mbps} = \text{system:system:net\_data\_recv} + \text{fcp:fcp:fcp\_write\_data} + \text{iscsi:iscsi:iscsi\_write\_data}$$

$$\text{load\_outbound\_mbps} = \text{system:system:net\_data\_sent} + \text{fcp:fcp:fcp\_read\_data} + \text{iscsi:iscsi:iscsi\_read\_data}$$
- (7-Mode environments only) Top Storage Systems by Total Ops  
Displays the `pa_total_ops` counter, which is calculated using the following formula:  

$$\text{system:pa\_total\_ops} = \text{system:system:nfs\_ops} + \text{system:system:cifs\_ops} + \text{system:system:fcp\_ops} + \text{system:system:iscsi\_ops} + \text{system:system:http\_ops}$$
- (7-Mode environments only) Top Storage Systems by CPU Utilization  
This panel displays the `cpu_busy` counter.
- (clustered environments only) Top Vservers by Total Ops

This panel displays the top Vservers, based on certain performance counters.

- (clustered environments only) Top Nodes by CPU Utilization  
This panel displays the top nodes based on the highest CPU utilization.

## Group - Top Objects

This view displays the top five volumes and aggregates in a group. The following panels are available under this view:

- Top Volumes by Latency  
Displays the avg\_latency counter.
- Top Volumes by Throughput  
Displays the throughput counter, which is calculated using the following formula:  
 $\text{throughput} = \text{volume:}<\text{instance}>:\text{read\_data} + \text{volume:}<\text{instance}>:\text{write\_data}$
- Top Volumes by Total Ops  
Displays the total\_ops counter.
- Top Aggregates by Total Ops  
Displays the total\_transfers counter.

**Note:** The Top N chart view does not display data for counter groups that have sampling intervals over 5 minutes. However, you can set the global option to a value  $\geq 2 \times$  counter group sampling interval, to populate the Top N chart.

## (7-Mode environments only) Group -Top vFiler units

This view displays the top five vFiler units in a group. The following panels are available under this view:

- Top vFiler units by Disk Data Transferred  
Displays the vfiler\_data\_transferred counter, which is calculated using the following formula:  
 $\text{vfiler\_disk\_transferred} = \text{vfiler:}<\text{instance}>:\text{vfiler\_read\_bytes} + \text{vfiler:}<\text{instance}>:\text{vfiler\_write\_bytes}$
- Top vFiler units by Network Throughput  
Displays the vfiler\_nw\_throughput counter, which is calculated using the following formula:  
 $\text{vfiler\_nw\_throughput} = \text{vfiler:}<\text{instance}>:\text{vfiler\_net\_data\_recv} + \text{vfiler:}<\text{instance}>:\text{vfiler\_net\_data\_sent}$
- Top vFiler units by Total Ops  
Displays the vfiler\_total\_ops counter, which is calculated using the following formula:  
 $\text{vfiler\_total\_ops} = \text{vfiler:}<\text{instance}>:\text{vfiler\_read\_ops} + \text{vfiler:}<\text{instance}>:\text{vfiler\_write\_ops} + \text{vfiler:}<\text{instance}>:\text{vfiler\_misc\_ops}$

## Top CPUs

This view displays the top five CPUs in a group. The following panel is available under this view:

- cpu\_busy

This panel displays the `cpu_busy` counter.

## Top Network Interfaces

This view displays the top five network interfaces in a group. The following panels are available under this view:

- `recv_data`  
Displays the `recv_data` counter.
- `recv_errors`  
Displays the `recv_errors` counter.
- `recv_packets`  
Displays the `recv_packets` counter.
- `send_data`  
Displays the `send_data` counter.
- `send_errors`  
Displays the `send_errors` counter.
- `send_packets`  
Displays the `send_packets` counter.

## Predefined views at the storage system level (7-Mode environments only)

You can display predefined views at the storage system level to analyze the performance data.

### Storage system Summary View

This view provides a performance summary for a specific storage system. This is the default view that is displayed when you select or navigate to a storage system.

The following panels are available under this view:

- Top Performance Events  
Counters are not applicable for this panel.
- Network Throughput  
Displays the `load_total_mbps`, `load_inbound_mbps`, and `load_outbound_mbps` counters, which are calculated using the following formulae:  

$$\text{load\_total\_mbps} = \text{load\_inbound\_mbps} + \text{load\_outbound\_mbps}$$

$$\text{load\_inbound\_mbps} = \text{system:system:net\_data\_recv} + \text{fcp:fcp:fcp\_write\_data} + \text{iscsi:iscsi:iscsi\_write\_data}$$

$$\text{load\_outbound\_mbps} = \text{system:system:net\_data\_sent} + \text{fcp:fcp:fcp\_read\_data} + \text{iscsi:iscsi:iscsi\_read\_data}$$
- Average Latency per Protocol  
Displays the `nfsv3_avg_op_latency`, `nfsv4_op_latency`, and `cifs_latency` counters.
- All Protocol Ops  
Displays the following counters:

- system:system:nfs\_ops
  - system:system:cifs\_ops
  - system:system:http\_ops
  - system:system:fc\_ops
  - system:system:iscsi\_ops
- CPU Utilization  
Displays the cpu\_busy counter.

### Storage system - Top Logical Objects

This view displays the top five logical objects, such as volumes, qtrees, and LUNs, based on different counters.

The following panels are available under this view:

- Top Volumes by Ops  
Displays the volume:<instance>:total\_ops counter.
- Top Volumes by Latency  
Displays the volume:<instance>:avg\_latency counter.
- Top LUNs by Ops  
Displays the lun:<instance>:total\_ops counter.
- Top LUNs by Latency  
Displays the lun:<instance>:avg\_latency counter.
- Top Qtrees by Total Ops  
Displays the total\_ops counter, which is the sum of qtree:<instance>:nfs\_ops and qtree:<instance>:cifs\_ops counters.

### Storage system - Top Physical Objects

This view displays the top five aggregates and disks in a storage system.

The following panels are available under this view:

- Top Aggregates by Total Ops  
Displays the aggregate:<instance>:total\_transfers counter.
- Top Disks by Disk Busy Percentage  
Displays the disk\_busy counter.

### Storage system - Per Protocol Latencies

This view displays the details of the latencies for different protocols at the storage system level.

The following panels are available under this view:

- Average Latency per Protocol  
Displays the nfsv3\_avg\_op\_latency, nfsv4\_op\_latency, and cifs\_latency counters.
- NFSv3 Latency by Optype

Displays the `nfsv3_avg_op_latency`, `nfsv3_read_latency`, and `nfsv3_write_latency` counters.

- NFSv4 Latency by Optype  
Displays the `nfsv4_avg_latency` counter.
- CIFS Latency by Optype  
Displays the `cifs_latency` counter.
- FCP Latency by Optype  
Displays the `fcv_read_latency` and `fcv_write_latency` counters.
- iSCSI Latency by Optype  
Displays the `iscsi_read_latency` and `iscsi_write_latency` counters.

### Storage system - Per Protocol Sizes

This view displays the details of the read and write sizes for different protocols at the storage system level.

The following panels are available under this view:

- NFSv3 Read Sizes  
Displays the `nfsv3_read_size_histo` counter.
- NFSv4 Read Sizes  
Displays the `nfsv4_read_size_histo` counter.
- NFSv3 Write Sizes  
Displays the `nfsv3_write_size_histo` counter.
- NFSv4 Write Sizes  
Displays the `nfsv4_write_size_histo` counter.

### Storage system - Per Protocol Ops

This view displays the details of the total operations for different protocols at the storage system level.

The following panels are available under this view:

- NFSv3 Ops by Optype  
Displays the `nfsv3_read_ops`, `nfsv3_write_ops`, and `nfsv3_ops` counters.
- NFSv4 Ops by Optype  
Displays the `nfsv4_read_ops`, `nfsv4_write_ops`, and `nfsv4_ops` counters.
- CIFS Ops by Optype  
Displays the `system:cifs_ops` counter.
- FCP Ops by Optype  
Displays the `fcv_read_ops`, `fcv_write_ops`, and `fcv_ops` counters.
- iSCSI Ops by Optype  
Displays the `iscsi_read_ops`, `iscsi_write_ops`, and `iscsi_ops` counters.
- All Protocol Ops  
Displays the `nfs_ops`, `cifs_ops`, `http_ops`, `fcv_ops`, and `iscsi_ops` counters.

## Storage system - Network Throughput

This view displays the details of the network throughput at the storage system level.

The following panels are available under this view:

- **Total Throughput**  
Displays the `san_throughput` and `nas_throughput` counters.  
This panel also displays the `load_total_mbps`, `load_inbound_mbps`, and `load_outbound_mbps` counters, which are calculated using the following formulae:  

$$\text{load\_total\_mbps} = \text{load\_inbound\_mbps} + \text{load\_outbound\_mbps}$$

$$\text{load\_inbound\_mbps} = \text{system:system:net\_data\_recv} + \text{fcp:fcp:fcp\_write\_data} + \text{iscsi:iscsi:iscsi\_write\_data}$$

$$\text{load\_outbound\_mbps} = \text{system:system:net\_data\_sent} + \text{fcp:fcp:fcp\_read\_data} + \text{iscsi:iscsi:iscsi\_read\_data}$$
- **NAS Throughput**  
Displays the `net_data_recv`, `net_data_sent`, and `nas_throughput` counters.  
The `nas_throughput` counter is calculated using the following formula:  

$$\text{nas\_throughput} = \text{net\_data\_recv} + \text{net\_data\_sent}$$
- **FCP Throughput**  
Displays the `fcp_write_data`, `fcp_read_data`, and `fcp_throughput` counters.  
The `fcp_throughput` counter is calculated using the following formula:  

$$\text{fcp\_throughput} = \text{fcp\_write\_data} + \text{fcp\_read\_data}$$
- **iSCSI Throughput**  
Displays the `iscsi_write_data`, `iscsi_read_data`, and `iscsi_throughput` counters.  
The `iscsi_throughput` counter is calculated using the following formula:  

$$\text{iscsi\_throughput} = \text{iscsi\_write\_data} + \text{iscsi\_read\_data}$$
- **Disk Traffic to User Traffic ratio**  
Displays the `load_write_bytes_ratio` and `load_read_bytes_ratio` counters, which are calculated using the following formulae:  

$$\text{load\_write\_bytes\_ratio} = \text{disk\_data\_written} / \text{load\_inbound\_mbps}$$

$$\text{load\_read\_bytes\_ratio} = \text{disk\_data\_read} / \text{load\_outbound\_mbps}$$

## Storage system - Disk Throughput

This view displays the details of the disk throughput. The data is averaged over all the disks in the storage system.

The following panel is available under this view:

- **Total disk Throughput in Kb/Sec**  
Displays the `disk_data_read`, `disk_data_written`, and `disk_throughput` counters. The `disk_throughput` counter is calculated using the following formula:  

$$\text{disk\_throughput} = \text{disk\_data\_read} + \text{disk\_data\_written}$$

## Storage system - Top vFiler units

This view displays the details of the top five vFiler units in the storage system.

The following panels are available under this view:

- Top vFiler units by CPU Utilization  
Displays the vfiler\_cpu\_busy counter.
- Top vFiler units by Network Throughput  
Displays the vfiler\_nw\_throughput counter.
- Top vFiler units by Disk Data Transferred  
Displays the vfiler\_data\_transferred counter.
- Top vFiler units by Total Ops  
Displays the vfiler\_total\_ops counter.

## Top Aggregates

This view displays the details of the top five aggregates in the storage system.

The following panels are available under this view:

- total\_transfers  
Displays the aggregate:total\_transfers counter.
- user\_reads  
Displays the aggregate:user\_reads counter.
- cp\_reads  
Displays the aggregate:cp\_reads counter.
- user\_writes  
Displays the aggregate:user\_writes counter.

## Top LUNs

This view displays the details of the top five LUNs in the storage system.

The following panels are available under this view:

- read\_ops  
Displays the lun:read\_ops counter.
- other\_ops  
Displays the lun:other\_ops counter.
- write\_ops  
Displays the lun:write\_ops counter.

## Top Volumes

This view displays the details of the top five volumes in the storage system.

The following panels are available under this view:

- read\_ops  
Displays the volume:read\_ops counter.
- other\_ops  
Displays the volume:total\_ops counter.
- write\_ops  
Displays the volume:write\_ops counter.

## Predefined views at the vFiler unit level (7-Mode environments only)

You can display predefined views at the vFiler unit level to analyze the performance data from these objects.

### vFiler unit Summary View

This view provides a summary of the vFiler unit details. The following panels are available under this view:

- Recent events  
Counters are not applicable for recent events.
- Top Volumes by Latency  
Displays the volume:<instance>:avg\_latency counter.
- Top Volumes by Ops  
Displays the volume:<instance>:total\_ops counter.
- Top Qtrees by Ops  
Displays the total\_ops counter, which is calculated using the following formula:  
$$\text{total\_ops} = \text{qtree: <instance>:nfs\_ops} + \text{qtree: <instance>:cifs\_ops}$$
- Top LUNs by Ops  
Displays the lun:<instance>:total\_ops counters.
- Top LUNs by Latency  
Displays the lun:<instance>:avg\_latency counters.

### vFiler unit Basic View

This view displays the details of various metrics for the vFiler unit. The following panels are available under this view:

- vfiler\_read\_ops  
Displays the vfiler\_read\_ops counter.
- vfiler\_write\_ops  
Displays the vfiler\_write\_ops counter.
- vfiler\_misc\_ops  
Displays the vfiler\_misc\_ops counter.
- vfiler\_cpu\_busy  
Displays the vfiler\_cpu\_busy counter.
- vfiler\_read\_bytes

- Displays the `vfiler_read_bytes` counter.
- `vfiler_write_bytes`  
Displays the `vfiler_write_bytes` counter.
- `vfiler_net_data_recv`  
Displays the `vfiler_net_data_recv` counter.
- `vfiler_net_data_sent`  
Displays the `vfiler_net_data_sent` counter.

## Predefined views at the processor level

You can use the view at the processor level to display the performance data.

### Processor Summary View

This view provides the summary of the processor details.

The following panels are available under this view:

- CPU Utilization  
This panel displays the `processor_busy` counter.
- Average CPU Busy per Domain  
This panel displays the following counters:
  - `processor:domain_busy:idle`
  - `processor:domain_busy:kahuna`
  - `processor:domain_busy:storage`
  - `processor:domain_busy:exempt`
  - `processor:domain_busy:raid`
  - `processor:domain_busy:target`
  - `processor:domain_busy:netcache`
  - `processor:domain_busy:netcache2`
  - `processor:domain_busy:cifs`
  - `processor:domain_busy:waflexempt`
  - `processor:domain_busy:network`

## Predefined views at the network interface level

You can use predefined views at the network interface level to display performance data.

### Network Interface Summary View

This view provides the summary of details about a network interface card.

The following panels are available under this view:

- Top Performance Events  
Counters are not applicable for this panel.
- Collisions

This panel displays the collisions counter.

- Throughput in Pkts/Sec

This panel displays the `ifnet:rcv_packets`, `ifnet:send_packets`, and `ifnet:total_packets` counters.

The `ifnet:total_packets` counter is calculated using the following formula:

$$\text{ifnet:total\_packets} = \text{ifnet:rcv\_packets} + \text{ifnet:send\_packets}$$

- Throughput in Bytes/Sec

This panel displays the `ifnet:rcv_data`, `ifnet:send_data`, and `ifnet:total_data` counters.

The `ifnet:total_data` counter is calculated using the following formula:

$$\text{ifnet:total\_data} = \text{ifnet:rcv\_data} + \text{ifnet:send\_data}$$

- Packet Errors

This panel displays the `ifnet:rcv_errors`, `ifnet:send_errors`, and `ifnet:total_errors` counters.

The `ifnet:total_errors` counter is calculated using the following formula:

$$\text{ifnet:total\_errors} = \text{ifnet:rcv\_errors} + \text{ifnet:send\_errors}$$

- Multicast Packets

This panel displays the `ifnet:send_mcasts`, `ifnet:rcv_mcasts`, and `ifnet:total_mcasts` counters.

The `ifnet:total_mcasts` counter is calculated using the following formula:

$$\text{ifnet:total\_mcasts} = \text{ifnet:send\_mcasts} + \text{ifnet:rcv\_mcasts}$$

## Predefined views at the dataset level (7-Mode environments only)

You can display views at the dataset level to analyze their performance data.

### Dataset Summary View

This view displays the top five components in a dataset.

The following panels are available under this view:

- Top Volumes by Latency

This panel displays the `volume:<instance>:avg_latency` counter.

- Top Volumes by ops

This panel displays the `volume:<instance>:total_ops` counter.

- Top Qtrees by Ops

This panel displays a counter, which is a sum of the `qtree:<instance>:nfs_ops` and `qtree:<instance>:cifs_ops` counters.

## Predefined views at the resource pool level (7-Mode environments only)

You can display predefined views at the resource pool level to analyze the performance data.

### Resource Pool Summary View

This view displays the top five objects in a resource pool.

The following panels are available under this view:

- Top Aggregates by Total Transfers

This panel displays the aggregate:<instance>:total\_transfers counter.

- Top Disks by Disk Busy  
This panel displays the disk:<instance>:disk\_busy counter.
- Top Storage Systems by Ops  
This panel displays the pa\_total\_ops counters.

## Predefined views at the volume level

You can use the views at the volume level to display the performance data.

### Volume Summary View

This view provides the summary detail of the volume.

The following panels are available under this view:

- Top Performance Events  
Counters are not applicable for this panel.
- Top LUNs by Ops  
This panel displays the lun:<instance>:total\_ops counter.
- Top LUNs by Avg Latency  
This panel displays the lun:<instance>:avg\_latency counter.
- Top Qtrees by Ops (7-Mode environments only)  
This panel displays the total\_ops counter, which is the sum of qtree:<instance>:nfs\_ops and qtree:<instance>:cifs\_ops.
- Overall Latency by Optype  
This panel displays the following counters:
  - volume:<instance>:avg\_latency
  - volume:<instance>:read\_latency
  - volume:<instance>:write\_latency
  - volume:<instance>:other\_latency
- Overall Iops by Optype  
This panel displays the following counters:
  - volume:<volume\_name>:read\_ops
  - volume:<volume\_name>:write\_ops
  - volume:<volume\_name>:other\_ops
  - volume:<volume\_name>:total\_ops

### Volume Latency View

This view displays details of the latencies for different protocols for the volume.

The following panels are available under this view:

- Overall Latency by Optype  
This panel displays the following counters:

- volume:<instance>:avg\_latency
- volume:<instance>:read\_latency
- volume:<instance>:write\_latency
- volume:<instance>:other\_latency
- NFS Latency by Optype
 

This panel displays the following counters:

  - volume:<instance>:nfs\_read\_latency
  - volume:<instance>:nfs\_write\_latency
  - volume:<instance>:nfs\_other\_latency
  - volume:<instance>:nfs\_latency
- CIFS Latency by Optype
 

This panel displays the following counters:

  - volume:<instance>:cifs\_read\_latency
  - volume:<instance>:cifs\_write\_latency
  - volume:<instance>:cifs\_other\_latency
  - volume:<instance>:cifs\_latency
- SAN Latency by Optype
 

This panel displays the following counters:

  - volume:<instance>:san\_read\_latency
  - volume:<instance>:san\_write\_latency
  - volume:<instance>:san\_other\_latency
  - volume:<instance>:san\_latency

## Volume IOPs View

This view displays the details of the IOPS for different protocols at the storage system level.

The following panels are available under this view:

- Overall Iops by Optype
 

This panel displays the following counters:

  - volume:<volume\_name>:read\_ops
  - volume:<volume\_name>:write\_ops
  - volume:<volume\_name>:other\_ops
  - volume:<volume\_name>:total\_ops
- NFS Iops by Optype
 

This panel displays the following counters:

  - volume:<volume\_name>:nfs\_read\_ops
  - volume:<volume\_name>:nfs\_write\_ops
  - volume:<volume\_name>:nfs\_other\_ops
  - volume:<volume\_name>:nfs\_ops

- CIFS Iops by Optype  
This panel displays the following counters:
  - volume:<volume\_name>:cifs\_read\_ops
  - volume:<volume\_name>:cifs\_write\_ops
  - volume:<volume\_name>:cifs\_other\_ops
  - volume:<volume\_name>:cifs\_ops
- SAN Iops by Optype  
This panel displays the following counters:
  - volume:<volume\_name>:san\_read\_ops
  - volume:<volume\_name>:san\_write\_ops
  - volume:<volume\_name>:san\_other\_ops
  - volume:<volume\_name>:san\_ops
- User Ops v/s Sys Ops  
This panel displays the following counters:
  - volume\_user\_ops
  - volume\_sys\_ops

The above counters are calculated using the following formula:

- $\text{volume\_user\_ops} = \text{sum}(\text{volume}:\langle\text{instance}\rangle:\text{nfs\_read\_ops} + \text{nfs\_write\_ops} + \text{nfs\_other\_ops} + \text{cifs\_read\_ops} + \text{cifs\_write\_ops} + \text{cifs\_other\_ops} + \text{san\_read\_ops} + \text{san\_write\_ops} + \text{san\_other\_ops})$
- $\text{volume\_sys\_ops} = \text{volume}:\langle\text{instance}\rangle:\text{total\_ops} - \text{volume\_user\_ops}$
- FlexCache Iops by Optype  
The above counters are calculated using the following formula:
  - volume:<volume\_name>:flexcache\_read\_ops
  - volume:<volume\_name>:flexcache\_write\_ops
  - volume:<volume\_name>:flexcache\_other\_ops

## Predefined views at the qtree level (7-Mode environments only)

You can display predefined views at the qtree level to analyze their performance data.

### Qtree Summary View

This view provides the summary details of the qtree.

The following panels are available under this view:

- Top Performance Events  
Counters are not applicable for this panel.
- Throughput in Ops  
This panel displays the following counters:
  - qtree:<instance>:nfs\_ops

- `qtree:<instance>:cifs_ops`
- `qtree:<instance>:internal_ops`

## Predefined views at the LUN level

You can use the views at the LUN level to display the performance data.

### LUN Summary View

This view provides the summary of LUN details.

The following panels are available under this view:

- Top Performance Events  
Counters are not applicable for this panel.
- Throughput in Ops  
This panel displays the following counters:
  - `lun:<instance>:read_ops`
  - `lun:<instance>:write_ops`
  - `lun:<instance>:other_ops`
  - `lun:<instance>:total_ops`
- Throughput in Bps  
This panel displays the following counters:
  - `lun:<instance>:read_data`
  - `lun:<instance>:write_data`
  - `throughput`
- Average Latency  
This panel displays the `lun:<instance>:avg_latency` counter.

### LUN Alignment View

This view provides the alignment details of the LUN.

The following panels are available under this view:

- Aligned WAFL Ops  
This panel displays the following counters:
  - `read_align_histo`
  - `write_align_histo`
- Unaligned WAFL Ops  
This panel displays the following counters:
  - `unaligned_reads`
  - `unaligned_writes`
- Partial blocks  
This panel displays the following counters:

- read\_partial\_blocks
- write\_partial\_blocks

## Predefined views at the aggregate level

You can view the details of the aggregate to understand the performance data.

### Aggregate Summary View

This view provides the summary of aggregate details.

The following panels are available under this view:

- Top Performance Events  
Counters are not applicable for this panel.
- Top Disks by disk\_busy  
This panel displays the disk:<instance>:disk\_busy counter.
- Throughput in Blocks/Sec  
This panel displays the following counters:
  - aggregate:<instance>:user\_read\_blocks
  - aggregate:<instance>:user\_write\_blocks
  - aggregate:<instance>:cp\_read\_blocks
  - total\_transfers

## Predefined views at the disk level

You can use the views at the disk level to display the performance data.

### Disk Summary view

This view provides the summary of the disk details.

The following panels are available under this view:

- Top Performance Events  
Counters are not applicable for this panel.
- Throughput in Ops  
This panel displays the following counters:
  - disk:<instance>:total\_transfers
  - disk:<instance>:user\_reads
  - disk:<instance>:user\_writes
  - disk:<instance>:cp\_reads
- Throughput in Blocks  
This panel displays the following counters:
  - disk:<instance>:user\_read\_blocks
  - disk:<instance>:user\_write\_blocks

- disk:<instance>:cp\_read\_blocks
- throughput
- Disk Latency  
This panel displays the following counters:
  - disk:<instance>:user\_read\_latency
  - disk:<instance>:user\_write\_latency
  - disk:<instance>:cp\_read\_latency
- Disk Chain Info  
This panel displays the following counters:
  - disk:<instance>:user\_read\_chain
  - disk:<instance>:user\_write\_chain
  - disk:<instance>:cp\_read\_chain
- Disk Util  
This panel displays the disk:<instance>:disk\_busy counter.
- Guaranteed Ops  
This panel displays the guaranteed\_reads and guaranteed\_writes counters.

## Predefined view at the target level (7-Mode environments only)

You can display a view at the target level to interpret the performance data.

### Target Basic

This view provides the basic details at the target level.

The following panels are available under this view:

- read\_ops  
Displays the read\_ops counter.
- write\_ops  
Displays the write\_ops counter.
- other\_ops  
Displays the other\_ops counter.
- queue\_full  
Displays the queue\_full counter.

## Predefined views at the cluster level (clustered environments only)

You can display the views at the cluster level to analyze the performance data.

### Cluster Summary View

This view provides a summary for a specific cluster. This is the default view that is displayed when you select or navigate to a cluster.

The following panels are available under this view:

- Top Performance Events  
Counters are not applicable for this panel.
- Top Vservers by Total Ops  
Displays the total\_ops counter.
- Top Nodes by CPU Busy  
Displays the cpu\_busy counter.
- Top Aggregates by total\_transfers  
Displays the total\_transfers counter.
- Top Volumes by Latency  
Displays the avg\_latency counter.

## Predefined views at the Vserver level (clustered environments only)

You can display views at the Vserver level to analyze the performance data.

### Vserver Summary View

This view provides a summary of a specific Vserver. This is the default view that is displayed when you select or navigate to a Vserver. The following panels are available under this view:

- Top Performance Events  
Counters are not applicable for this panel.
- Vservers by Total Ops  
Displays the total\_ops counter.
- Vserver - All Protocol Ops  
Displays the cifs\_ops, iscsi\_pa\_total\_ops and fcp\_pa\_total\_ops counters.

### Vservers - Top Volumes

This view displays the top five volumes in the Vserver. The following panels are available under this view:

- Top Volumes by Total Ops  
Displays the total\_ops counter.
- Top Volumes by Aggregate Latency  
Displays the avg\_latency counter.
- Top Volumes by Read Ops  
Displays the read\_ops counter.
- Top Volumes by Write Ops  
Displays the write\_ops counter.

### **Vservers - Top LUNs**

This view displays the top five LUNs in the Vserver. The following panels are available under this view:

- Top LUNs by Total Ops  
Displays the total\_ops counter.
- Top LUNs by Aggregate Latency  
Displays the avg\_latency counter.
- Top LUNs by Read Ops  
Displays the read\_ops counter.
- Top LUNs by Write Ops  
Displays the write\_ops counter.

### **Vserver CIFS View**

This view provides a summary of the CIFS performance of the Vserver. The following panels are available under this view:

- Vserver CIFS Ops  
Displays the cifs\_ops, cifs\_read\_ops, cifs\_write\_ops, cifs\_read\_latency and the cifs\_write\_latency counters.
- Vserver CIFS Latencies  
Displays the cifs\_latency counter.

### **Vserver FCP View**

This view provides a summary of the FCP performance of the Vserver. The following panel is available under this view:

- Vserver FCP Ops  
Displays the fcp\_read\_ops and fcp\_write\_ops counters.

### **Vserver iSCSI View**

This view provides a summary of the iSCSI performance of the Vserver. The following panel is available under this view:

- Vserver iSCSI Ops  
Displays the iscsi\_read\_ops and iscsi\_write\_ops counters.

## Predefined views at the node level (clustered environments only)

You can display the views at the node level to analyze the performance data of nodes.

### Node Summary View

This view gives a summary for a specific node. This is the default view that is displayed when a user selects or navigates to a node.

The following panels are available under this view:

- Top Performance Events  
Counters are not applicable for this panel.
- Throughput  
Displays the `net_data_sent`, `net_data_recv`, `disk_data_read`, and the `disk_data_written` counters.
- Volume Throughput  
Displays the `read_data` and `write_data` counters.
- Volume Latencies  
Displays the `avg_latency` counter.
- CPU Utilization  
Displays the `cpu_busy` counter.

### Node Per Protocol Ops

This view displays charts related to the network throughput of the specified node.

The following panels are available under this view:

- NFSv3 ops  
Displays the `nfsv3_read_ops` and `nfsv3_write_ops` counters.
- CIFS ops  
Displays the `cifs_read_ops` and `cifs_write_ops` counters.
- FCP ops  
Displays the `read_ops` and `write_ops` counters.

### Node - Top Volumes

This view displays the top five volumes in the node. This panel displays the following counters:

- `read_ops`  
Displays the `read_ops` counter.
- `write_ops`  
Displays the `write_ops` counter.
- `total_ops`  
Displays the `total_ops` counter.

### **Node - Top Physical Objects**

This view displays the top five physical objects in the node. The following panels are available under this view:

- Top Aggregates by Total Ops  
Displays the total\_transfers counter.
- Top Disks by Disk Busy Percentage  
Displays the disk\_busy counter.

### **Node - Top Logical Objects**

This view shows the top five logical objects in the node. The following panels are available under this view:

- Top LUNs by Latency  
Displays the avg\_latency counter.
- Top LUNs by Ops  
Displays the total\_ops counter.
- Top Volumes by Latency  
Displays the avg\_latency counter.
- Top Volumes by Ops  
Displays the total\_ops counter.

### **Node - Top Aggregates**

This view displays the top five aggregates in the node. This panel displays the following counters:

- total\_transfers  
Displays the total\_transfers counter.
- cp\_reads  
Displays the cp\_reads counter.
- user\_reads  
Displays the user\_reads counter.
- user\_writes  
Displays the user\_writes counter.

### **Node - Top LUNs**

This view displays the top five LUNs in the node. This panel displays the following counters:

- read\_ops  
Displays the read\_ops counter.
- write\_ops  
Displays the write\_ops counter.

- other\_ops  
Displays the other\_ops counter.

# Alarms, hosts, and thresholds

---

You can use alarms, list of hosts, and thresholds in Performance Advisor to monitor datasets and resources, edit login credentials on hosts, and identify potential performance issues of storage systems.

## What alarms are

Alarms are configured notifications that are sent whenever a specific event or an event of a specific severity type occurs, not necessarily related to a specific user. Alarms are used to monitor and manage datasets and resources, as a whole.

Alarms are not the events themselves, only the notification of events. Alarms are not the same as user alerts. For a complete description of user alerts, see the *Operations Manager Administration Guide*.

You can create alarms for any storage system for which you want automatic notification of events. You can use the Set Up Alarms window to add, monitor, and edit alarms.

## List of alarm management tasks

You can respond to, view, edit, test, disable, enable, add, or delete data performance alarms.

<b>Alarm management tasks</b>	This list describes the alarm management tasks that you perform most often.
<b>Responding to alarms</b>	When you receive an alarm, you should acknowledge the event and resolve the condition that triggered the alarm. If the repeat notification feature is enabled and the alarm condition persists, you continue to receive notifications until you acknowledge the event.
<b>Viewing the list of alarms</b>	View the list of all currently configured data protection alarms when you want an overview of what is configured for any selected group. You can control the sort order of any column in the list. You can also control which alarms are displayed by filtering the information in any column in the list.
<b>Viewing the configuration values for any selected alarm</b>	View the configuration details of any selected alarm when you want to know specific information or you are considering modifying the configuration.
<b>Editing the alarm</b>	Modify the configuration of an alarm when you need to accommodate changes in the environment. For example, you might need to update a recipient e-mail address, add another recipient pager address, add a recipient script name, or change the hours during which the alarm is active.

<b>Testing an alarm</b>	Test a new or modified alarm by having Protection Manager send a test message to all the recipients configured for the selected alarm.
<b>Disabling or enabling an alarm</b>	Disable an alarm when you need to stop its functioning for a while but want to retain the alarm configuration. For example, if you have an alarm configured for the SnapVault Backup Failed event and you scheduled downtime for maintenance on that host, you might disable the alarm during the planned downtime. When the host is up again, you can enable the alarm.
<b>Adding an alarm</b>	Configure a new alarm when you want notification of a specific event or any event of a specific severity type for a group.
<b>Deleting an alarm</b>	Delete an alarm only when you are sure that you no longer need notification of the event or severity type occurring for the group.

## Managing and monitoring alarms

You can use the Alarms window to perform all the alarm monitoring and managing tasks. When responding to an alarm, you can use the Events window to view details about the event.

### Monitoring alarms

You can view a list of all the alarms configured for your application and capabilities.

#### Before you begin

You must be authorized to perform all the steps of this task; your RBAC administrator can confirm your authorization in advance.

#### Steps

- Depending on the alarms you want to view, perform one of the following actions:
  - For protection, provisioning, or disaster recovery alarms, from the menu bar, click **Notifications > Alarms**.
  - For Performance Advisor alarms, from the menu bar, click **Set Up > Alarms**.
- Optional: You can customize the **Alarms** window in one of the following ways:
  - Select an alarm to see the configured property values for that alarm.
  - Click  in a column header to control which alarm entries you want displayed. The color of the column header changes to indicate that you are filtering the entries in that column. Some column filters display a drop-down list to select from and other column filters display a search field in which you can enter text to select.
  - Click the sort arrows in a column header to change the sort order of the entries in that column.

- Click  in the upper-right corner of the list to select which columns are displayed.
- Drag the bottom of the alarms list area up or down to resize that area.

## Creating alarms

You can create alarms by using the Add Alarm wizard.

### Steps

1. Click **Set Up > Thresholds**.
2. Click the **Summary** tab.
3. Select the threshold.
4. Click **Add Alarm**.
5. Complete the **Add Alarm** wizard.

## Editing alarms

You can change the configuration of an existing alarm.

### Before you begin

You must be authorized to perform all the steps of this task; your RBAC administrator can confirm your authorization in advance.

### Steps

1. For protection, provisioning, or disaster recovery alarms, from the menu bar, click **Notifications > Alarms**. For Performance Advisor alarms, from the menu bar, click **Set Up > Alarms**.
2. Select an alarm in the **Alarms** window and click **Edit**.
3. Use the tabs in the **Properties** sheet (Group, Event Type, Recipient, and Details) to change the configured property values.
4. Click **Apply** to commit your changes.
5. Click **OK** to close the **Properties** sheet.

The new configuration is immediately activated and displayed in the Alarms list.

6. Verify your changes by viewing the results that are displayed in the **Alarms** window.

You can select an alarm to view the current property values for that alarm.

## Testing alarms

You can test an alarm to check its configuration, after creating or editing the alarm.

### Before you begin

You must be authorized to perform all the steps of this task; your RBAC administrator can confirm your authorization in advance.

### Steps

1. For protection, provisioning, or disaster recovery alarms, from the menu bar, click **Notifications > Alarms**. For Performance Advisor alarms, from the menu bar, click **Set Up > Alarms**.

2. Select an alarm and click **Test**.

You can select any alarm regardless of whether it is enabled or disabled.

3. Click **OK** in the Confirm Alarm(s) Test window to begin the test.

A test event notification is sent to each configured recipient. If a script is configured, the test notification runs the script.

4. Verify the alarm recipient configuration by checking that each recipient received a test message. If a script recipient is configured, check that the script was successfully started.

### After you finish

You can modify any of the alarm properties from the Alarms window.

## Enabling or disabling alarms

You can disable an alarm when you need to temporarily stop its functioning and enable it when you want it to start functioning again.

### Before you begin

You must be authorized to perform all the steps of this task; your RBAC administrator can confirm your authorization in advance.

### About this task

Disabling an alarm enables you to retain the alarm configuration while its functioning is temporarily stopped. For example, if you have an alarm that is configured for the SnapVault Backup Failed event and you scheduled down time for maintenance on a host that is in the resource pool for the group associated with that alarm, you might disable the alarm during the planned down time. When the host is up again, you can enable the alarm to resume its functioning.

### Steps

1. For protection, provisioning, or disaster recovery alarms, from the menu bar, click **Notifications > Alarms**. For Performance Advisor alarms, from the menu bar, click **Set Up > Alarms**.
2. In the alarms list, locate the entry for the alarm you want to enable or disable.
3. Clear the **Enabled** check box to disable the associated alarm, or select the **Enabled** check box to enable it.  
  
The alarm is immediately disabled or enabled.
4. Verify your change by viewing the results that are displayed in the **Alarms** window.

## Adding alarms

You can add an alarm when you want immediate notification that a specified event or event class or event of a specified severity level occurred.

### Before you begin

You must be authorized to perform all the steps of this task; your RBAC administrator can confirm your authorization in advance.

Have the following information available to complete this task:

- The resource group with which you want the alarm associated.
- The event name, event class, or severity type that triggers the alarm.
- Who and what you want the event notification sent to.
- The time period during which the alarm is active.
- Whether you want the event notification repeated until the event is acknowledged and how often the notification should be repeated.

### Steps

1. For protection, provisioning, or disaster recovery alarms, from the menu bar, click **Notifications > Alarms**. For Performance Advisor alarms, from the menu bar, click the **Set Up Alarms** window.
2. Click **Add** to start the **Add Alarm** wizard.
3. On each page of the wizard, enter the appropriate information.
4. Click **Finish** to commit your choices and close the **Add Alarm** wizard.
5. Verify the creation and configuration of the alarm by viewing the results that are displayed in the **Alarms** window.

### After you finish

You can edit the alarm properties from the Alarms window.

## Deleting alarms

You can delete an alarm when you no longer need immediate notification of an event or severity type.

### Before you begin

You must be authorized to perform all the steps of this task; your RBAC administrator can confirm your authorization in advance.

### Steps

1. For protection, provisioning, and disaster recovery alarms, from the menu bar, click **Notifications > Alarms**. For Performance Advisor alarms, from the menu bar, click **Set Up > Alarms**.
2. Select one or more alarms in the **Alarms** window and click **Delete**.
3. Click **OK** in the Confirm Alarm(s) Delete dialog box to delete the selected alarms.  
The alarm configurations are deleted and the alarms are removed from the Alarms list.
4. Verify your deletion by viewing the results that are displayed in the **Alarms** window.

## Responding to alarms

When you receive an alarm, you can acknowledge the event and resolve the condition that triggered the alarm.

### Before you begin

You must be authorized to perform all the steps of this task; your RBAC administrator can confirm your authorization in advance.

### About this task

If the repeat notification feature is not enabled, you receive the event notification only once. If the repeat notification feature is enabled and the alarm condition persists, you continue to receive notifications until you acknowledge the event.

### Steps

1. For protection, provisioning, and disaster recovery alarms, from the menu bar, click **Notifications > Events**. For Performance Advisor alarms, from the menu bar, click **Monitor > Events**.
2. Select an event whose details you want to view.
3. Click **Acknowledge** to indicate that you are taking responsibility for managing that event.
4. Click **Yes** in the Acknowledge Events dialog box to acknowledge the selected event.

Your user name and the time are entered in the Events list for the selected event.

5. Find the cause of the event and take corrective action.

## Display of storage systems by using Performance Advisor

You can use Performance Advisor to view a list of the hosts discovered by the DataFabric Manager server. You can set, modify, and check the login credentials on hosts by using the application.

The following conditions should be set for the DataFabric Manager server to start collecting data from the discovered storage systems:

- The login credentials for the storage system must be set.
- The transport protocol must be set for the storage system discovered by the DataFabric Manager server.
- The performance data collection option must be set.

If you are using a version of NetApp Management Console prior to version 2.1, then you must use the DataFabric Manager server to set the credentials. If you are using a version of NetApp Management Console later than version 2.1, then you must use the NetApp Management Console to set the credentials.

### Host table field descriptions

You can select a host to display the host name, IP address, host status, user name, password, host transport, and other Performance Advisor details.

Field	Description
Name	The name of the host
Node Name	(clustered environments only) The name of the host
IP address	The IP address of the host
Cluster Management IP address	(clustered environments only) The IP address of the cluster
Node Management IP address	(clustered environments only) The IP address of the node
Perf Status	The status of the performance
Status	The status of the host
Login Credentials	Information that the user is authenticated on the host
Perf Advisor Transport	The protocol used for communication
Data Collection Status	The status of data collection in the host
Max Projected Space	Maximum space that is available in the host

Field	Description
Used Space	Space that is used in the host
Percentage of Used Space	Space, in percentage, that is used in the host
Host Transport	The protocol used for communication

## Editing host credentials

You can set, edit, or verify the host credentials in storage systems and clusters by using Performance Advisor.

### Steps

1. From the menu, perform the appropriate action:

For...	Do this...
Storage systems (7-Mode environments only)	Click <b>Set Up &gt; Storage Systems</b> .
Clusters (clustered environments only)	Click <b>Set Up &gt; Clusters</b> .

2. Select a host, and click **Edit**.
3. In the **Host Properties** window, enter the user name and password in the **Login Credentials** section.
4. Select the **Use hosts.equiv** check box to use the `hosts.equiv` option.  
For more information about the `hosts.equiv` option, see the *OnCommand Unified Manager Operations Manager Administration Guide*.
5. If you want to collect data from this specific host, select the **Enable Data Collection** check box.
6. Select the transport protocol for data collection from the **Perf Advisor Transport** list.  
You can select one of the following options for the transport protocol: HTTPS Ok, HTTP Only, or Global Default. The default protocol setting is HTTP.
7. Click **Apply**, and then click **Ok**.

### Result

The credentials are updated in the DataFabric Manager server database.

### Related information

*OnCommand Unified Manager Operations Manager Administration Guide: [support.netapp.com/documentation/productsatoz/index.html](http://support.netapp.com/documentation/productsatoz/index.html)*

## Configuration of data collection

You can configure data collection in 7-Mode environments only by enabling or disabling counters through the Data Collection Configuration Wizard. You can also change the sample rate and retention period for counter groups by using the wizard. The default sample rate for data collection in 7-Mode environments is 1 minute.

For clustered environments, you can only view the default data collection configuration, which is system generated. The default sample rate for data collection in clustered environments is 5 minutes. You cannot modify the sample rate.

**Note:** Performance Advisor does not support data collection for unmapped LUNs.

## Copying the data collection configuration (7-Mode environments only)

You can copy the configuration related to the performance data collection of one storage system and apply it to one or more storage systems for easy management and administration.

### Before you begin

The Data Collection Status icon in the hosts list must be green for the storage system.

### Steps

1. Click **Set Up > Storage Systems**.
2. Click **Data Collection > Copy**, and then click **Next**.
3. Select one or more available storage systems.

**Note:** If you select more than 10 storage systems, the NetApp Management Console might stop responding.

4. Click **Next**, and then click **Finish**.

## Effect of increasing sample rates (7-Mode environments only)

You can lose the historical data if you increase the sample rates for data collection.

Some space is reclaimed on the DataFabric Manager server when data samples are collected in even numbers such as 2, 4, and 6. For example, if you have 100 data samples collected for a week, when you double the sample rate, the number of data samples collected are halved to 50. Every second sample from the collection is deleted.

## Setting retention periods and sample rates (7-Mode environments only)

You can reset sample rates to set the frequency with which performance data should be collected, and retention periods to set how long the data should be retained in the system by using the Data Collection Configuration wizard. You can start the wizard from the Set Up Storage Systems window.

### About this task

**Attention:** If you decrease the retention period immediately after increasing the sample rate, there might be a data loss.

### Steps

1. Click **Set Up > Storage Systems**.
2. Select the storage system for which you want to set a retention period and sample rate.
3. Click **Data Collection > Edit**.
4. Set the retention period and sample rate in the **Data Collection Configuration** wizard.

## How thresholds work

You can use thresholds to determine the point at which Performance Advisor should generate an event or alarm to identify potential issues that might impact the performance of storage objects.

This is dependent on the threshold interval and the counter value that you set. If you set a threshold on a counter such as the average latency counter on any volume, then an event is generated when the threshold breaches a particular counter value for an interval.

When you apply a threshold to a parent object, and if the threshold uses a counter associated with a child object, then the threshold is applied to all the child objects. If the parent-child object relationship is broken, the thresholds inherited from the parent no longer apply to the child.

You can apply thresholds for two or more counters on one or more objects. The threshold interval for all the thresholds in a combination remains the same. For example, you can set thresholds for the `avg_latency` and `total_ops` counters within a volume. Events are generated only when all the thresholds are breached.

If you apply thresholds to objects with a parent-child relationship, such as aggregate and disk objects, an event is generated at the child object level. For example, you can set threshold values for the `cp_read_blocks` counter on an aggregate and the `disk_busy` counter on a disk. The event is generated on the object that is lowest in the hierarchy.

In clustered environments, every cluster node contains a volume called `vol0` that stores the configuration information of the node. This volume does not belong to a Vserver and therefore, cannot be used to provide data. Performance Advisor does not manage these volumes.

You cannot apply thresholds to the following combination of cluster objects:

- Disks and LUNs
- Disks and volumes
- Vservers and aggregates
- Vservers and disks
- Vservers and ifnet (interface)

You cannot apply thresholds to the following combination of 7-Mode objects:

- Disks and LUNs
- Disks and qtrees
- Disks and volumes
- Network interfaces and targets
- Aggregates and vFiler units
- vFiler units and disks

You can set thresholds on counters specific to objects such as targets, interfaces, and disks. However, you cannot set thresholds on processors, RAID groups, and plaxes.

## What resource properties are

Resource properties are conditions such as disk type, disk roles, system models, and system versions that should be met while applying thresholds on the objects. By applying resource properties, you can generate events only when a threshold breach occurs on a particular model and a version of the storage system.

Rule-based thresholds are applied to groups comprising storage systems. When a new storage system is added to the group, the threshold applied to the group must also be applied to the new member. The threshold settings are automatically refreshed after 15 min. However, you can refresh the settings immediately using the `dfm perf threshold refresh` command.

For example, you can set a threshold only on 3170 in a group by setting the filter details. However, the threshold must be rule-based.

You can use the Add Threshold Wizard to set the filter details for a threshold. You can display the filter property and the corresponding value by selecting a value in the list.

## Viewing threshold values

You can view existing threshold values by using the Summary tab.

### Steps

1. Click **Set Up > Thresholds**.
2. Click the **Summary** tab.

## When to use thresholds in combination

You might not want to receive alerts for every small activity on an object. In such cases, you should consider applying thresholds in combination by creating a rule on more than one counter for objects in storage systems.

For example, if you set thresholds on the `avg_latency` counter for all LUNs in a storage system, you might receive alarms from LUNs which are hardly used. To stop generating such events, you must apply thresholds on more than one counter. In this case, you can create a rule to generate alerts only when the `total_ops` counter and the `avg_latency` counter breach the threshold values.

## What the Details tab is

The Details tab displays a page with the object tree on the left pane and the list of counters with the threshold values on the right pane.

The objects in the object tree are of two types:

- Logical
- Physical

## Adding thresholds

You can add thresholds for the performance counters on storage systems using the Set Up Thresholds window. Alternatively, you can right-click the object in the logical or physical hierarchy to add thresholds.

### Steps

1. Click **Set Up > Thresholds**.
2. Click the **Summary** tab.
3. Click **Add**.

You cannot add thresholds on the objects whose storage systems do not have valid credentials.

4. Complete the **Add Thresholds** wizard by entering the threshold values you want to set for your performance counters.

## Editing thresholds by using the Summary tab

You can edit the type, value, and interval of thresholds and event names by using the Summary tab in the Set Up Thresholds window. However, you cannot edit thresholds that are based on threshold templates.

### Steps

1. Click **Set Up > Thresholds**.
2. Click the **Summary** tab.

3. Modify the threshold by choosing one of the following actions:
  - Select the threshold, and click **Edit**.
  - Right-click the threshold, and click **Edit**.
4. Edit the threshold details.
5. Click **Apply**.
6. Click **Ok**.

## Editing thresholds using charts

You can modify the threshold value and the threshold interval on charts.

### Steps

1. Select **Show Threshold** on the chart.
2. Drag the dotted line.

However, you cannot edit thresholds if they are based on threshold templates or are set on parent objects. In such cases, you cannot drag the line.
3. Edit the threshold details.
4. Click **Apply**.
5. Click **OK**.

## Editing thresholds using the Details tab

You can modify the threshold value and the threshold interval for the selected threshold using the **Details** tab in the Set Up Thresholds window.

### About this task

**Note:** You cannot edit thresholds based on threshold templates or thresholds set on parent objects.

### Steps

1. Click **Set Up > Thresholds**.
2. Click the **Details** tab.
3. Select the object.
4. Click the threshold in the **Existing threshold** box.
5. Edit the threshold value.
6. Edit the threshold interval.
7. Click **Apply**.

8. Click **OK**.

## Deleting thresholds

You can delete thresholds by using the Summary tab in the Set Up Thresholds window.

### Steps

1. Click **Set Up > Thresholds**.
2. Click the **Summary** tab.
3. Delete one or more thresholds by choosing one of the following actions:
  - Select the thresholds and click **Delete**.
  - Select the thresholds, and then right-click and click **Delete**.
4. Click **Ok**.

## What a threshold template is (7-Mode environments only)

A threshold template is a set of thresholds that you can apply to one or more objects in a storage system. Using threshold templates, you can group multiple thresholds into a single unit and associate multiple objects to these thresholds.

You can assign an object to a template only if there is at least one applicable threshold in the template. For example, you can assign a volume to a template with two thresholds: one set on `system:cpu_busy` and the other set on `volume:total_ops`. You cannot assign a volume object if the volume threshold is not present in the template.

You might want to generate a set of events for an object when it exceeds its counter thresholds. In such cases, you should consider creating a threshold template, which defines a set of thresholds, and apply the template to the object. For example, you can create a threshold template that contains a threshold for the `cp_writes` counter greater than 10 per second for 5 minutes. You can apply these values in a template to objects to generate events.

You can create and view templates by using the Set Up Threshold Templates window, which has two sections. The section on the top displays the template table, and the section on the bottom lists the events, counters, and resource properties. The **object** tab in the bottom-half of the page displays the objects that are applied to the selected template.

## When to use threshold templates (7-Mode environments only)

You might want to use threshold templates to modify a threshold that is applied on more than one object. You can also use the templates to add or remove thresholds on objects.

For example, if you want to change the threshold limit from 90% to 80% for a threshold that is applied on the `system:cpu_busy` counter for 10 storage systems, you can modify all the 10 thresholds by using threshold templates. Threshold templates enable you to modify the threshold on all the storage systems with just one change in the template.

If you want to create 10 identical thresholds for 10 storage systems, you can apply a template to all the storage systems to create as many thresholds. Similarly, you can remove the objects from an existing threshold by using the threshold templates.

### **Creating threshold templates (7-Mode environments only)**

You can create threshold templates by using the Add Threshold Template wizard to apply threshold settings to a specific storage object.

#### **About this task**

**Note:** You can add a threshold template by using the Set Up Thresholds window.

#### **Steps**

1. Click **Set Up > Threshold Templates**.
2. Click **Add**.
3. Follow the prompts in the wizard to create the threshold template.

### **Editing threshold templates (7-Mode environments only)**

You can add, edit, or delete existing threshold templates by using the Set Up Threshold Templates window.

#### **Steps**

1. Click **Set Up > Threshold Templates**.
2. Click **Edit**.
3. Click **Threshold Details** to add, edit, or delete the thresholds in the template.
4. Click **Ok**.

## Glossary

---

<b>associated view</b>	A performance view available for an object. An associated view can be a predefined view or a custom view. Predefined views are associated to an object based on the object type. Custom views can be associated to an object by the user.
<b>counter</b>	A statistical measurement of activity on a storage system or storage subsystem that is provided by Data ONTAP.
<b>custom views</b>	User-defined views that include metrics from multiple performance counters.
<b>dataset</b>	A collection of storage sets, along with configuration information, associated with data. The storage sets associated with a dataset include a primary storage set used to export data to clients, and the set of replicas and archives that exist on other storage sets. Datasets represent exportable user data.
<b>hierarchical groups</b>	The customizable grouping of storage systems, clusters, and nodes whose performance can be monitored and displayed through Performance Advisor. All systems that are monitored by the DataFabric Manager server and whose performance can be monitored by Performance Advisor are displayed in the Groups browser panel of Performance Advisor.
<b>historical data</b>	<p>Data that is archived by the performance-monitoring server on the DataFabric Manager server. All the data that is included in the Performance Advisor default views is also archived as historical data.</p> <p>Historical data is accessible to any Performance Advisor that can connect to the workstation. Historical data is collected on an ongoing basis, independent of whether a client has the associated performance view open. Historical data can be used for diagnosing past performance problems or for short-term trend analysis.</p>
<b>hosting storage system</b>	The physical storage system on which one or more vFiler units are configured. Some counters that Performance Advisor tracks apply to both storage systems and vFiler units. Other counters (for example, CPU usage) apply only to storage systems and the associated host of a vFiler unit. The hosting storage system is also referred to as the <i>vFiler host</i> .
<b>logical objects</b>	Object types that represent storage systems, such as volumes, qtrees, LUNs, vFiler units, Vservers, and datasets.
<b>logical hierarchy</b>	The hierarchy that displays the logical objects.
<b>lower threshold</b>	The type of threshold that is set for an event generation when the counter value falls and remains below the lower threshold value for longer than the Threshold Interval specified.

<b>managed object</b>	Any object that has an identity and a name in the DataFabric Manager server object table. A managed object is an object that is contained within a DataFabric Manager server group. Volumes, aggregates, qtrees, and LUNs are examples of managed objects.
<b>NetApp Management Console</b>	The client platform for the Java-based NetApp Manageability Software applications. NetApp Management Console runs on a Windows or Linux workstation, separate from the system on which the DataFabric Manager server is installed.
<b>object</b>	<p>Typically there is an object associated with each hardware or software subsystem within Data ONTAP. Examples of hardware objects are the processor, disk, NVRAM, and networking card objects. FCP, iSCSI, CIFS, and NFS are examples of software protocol objects. WAFL, RAID, and target are examples of internal objects that are specific to Data ONTAP.</p> <p>Virtual objects, such as the system object, capture key statistics across all the other objects in one single place. Examples of system objects are <code>avg_processor_busy</code>, <code>nfs_ops</code>, <code>cifs_ops</code>, and <code>net_data_recv</code>.</p>
<b>Performance Advisor</b>	<p>The Performance Advisor component that is installed on the NetApp Management Console platform, which enables you to monitor the performance of storage systems and clusters.</p> <p>The user interface of Performance Advisor that contains only performance-monitoring information. This Performance Advisor interface is distinct from Operations Manager, which contains other DataFabric Manager server information.</p>
<b>performance-monitoring server</b>	The Performance Advisor component that is enabled on the DataFabric Manager server to collect and archive performance data at regular intervals from the monitored storage systems and clusters. Performance Advisor gathers sets of data that the performance-monitoring server has collected to generate its graphical charts and views.
<b>performance view</b>	A collection of one or more counters accessible through Performance Advisor for a group of storage systems or subsystems through one or more charts. Performance Advisor displays predefined views that are built in to the system, and custom views.
<b>physical objects</b>	Object types that represent the physical resources in a storage system, such as disks, aggregates, memory, network interfaces, resource pools, and RAID groups.
<b>physical hierarchy</b>	The hierarchy that displays the physical objects and instances.
<b>real-time data</b>	Data that is collected by Performance Advisor for display but is not stored. Real-time data is collected only as long as the performance view window

displaying it is open on Performance Advisor. Real-time data is accessible only to the client by which it is retrieved.

Real-time data is suitable for diagnosing immediate performance issues.

<b>resource pool</b>	A managed object in the DataFabric Manager server, containing storage provisioning resources such as storage systems, aggregates, and spare disks.
<b>retention period</b>	The amount of previously collected data for a counter that is accessible to the user. You can set the retention period based on units of a minute, hour, day, week, month, or year.
<b>sample rate</b>	The rate at which data is collected for a counter. You can set the sample rate based on units of a minute.
<b>storage set</b>	Containers that are used for delegation, replication, and in some cases, substorage provisioning. A storage set contains a group of volumes, while a volume should be in at most one storage set.
<b>storage system</b>	An appliance that is attached to a computer network and is used for data storage. FAS appliances and NearStore systems are examples of storage systems.
<b>templates and predefined templates</b>	<p>A template is a view definition that applies to object instances known to Performance Advisor.</p> <p>A set of pre-configured templates in Performance Advisor is known as <i>Predefined Template</i>.</p>
<b>threshold interval</b>	The amount of time, in seconds, for which an event generation is suppressed before Performance Advisor decides that a counter has crossed a specified threshold and an event has to be generated. The same interval is also used to generate a normal event.
<b>unmanaged object</b>	Objects apart from the managed objects belong to the class of unmanaged objects. An unmanaged object does not have a unique identity in the DataFabric Manager server table.
<b>upper threshold</b>	The type of threshold set for an event generation when the counter value exceeds and remains above the higher threshold value for longer than the specified Threshold Interval.
<b>vFiler unit</b>	One or more virtual storage systems that can be configured on a single physical storage system licensed for the MultiStore feature.
<b>view</b>	A collection of related panels represented together and displayed by the Performance Advisor client.

## Copyright information

---

Copyright © 1994–2013 NetApp, Inc. All rights reserved. Printed in the U.S.

No part of this document covered by copyright may be reproduced in any form or by any means—graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system—without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

**RESTRICTED RIGHTS LEGEND:** Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987).

## Trademark information

---

NetApp, the NetApp logo, Network Appliance, the Network Appliance logo, Akorri, ApplianceWatch, ASUP, AutoSupport, BalancePoint, BalancePoint Predictor, Bypass, Campaign Express, ComplianceClock, Cryptainer, CryptoShred, CyberSnap, Data Center Fitness, Data ONTAP, DataFabric, DataFort, Decru, Decru DataFort, DenseStak, Engenio, Engenio logo, E-Stack, ExpressPod, FAServer, FastStak, FilerView, Flash Accel, Flash Cache, Flash Pool, FlashRay, FlexCache, FlexClone, FlexPod, FlexScale, FlexShare, FlexSuite, FlexVol, FPolicy, GetSuccessful, gFiler, Go further, faster, Imagine Virtually Anything, Lifetime Key Management, LockVault, Mars, Manage ONTAP, MetroCluster, MultiStore, NearStore, NetCache, NOW (NetApp on the Web), Onaro, OnCommand, ONTAPI, OpenKey, PerformanceStak, RAID-DP, ReplicatorX, SANscreen, SANshare, SANtricity, SecureAdmin, SecureShare, Select, Service Builder, Shadow Tape, Simplicity, Simulate ONTAP, SnapCopy, Snap Creator, SnapDirector, SnapDrive, SnapFilter, SnapIntegrator, SnapLock, SnapManager, SnapMigrator, SnapMirror, SnapMover, SnapProtect, SnapRestore, Snapshot, SnapSuite, SnapValidator, SnapVault, StorageGRID, StoreVault, the StoreVault logo, SyncMirror, Tech OnTap, The evolution of storage, Topio, VelocityStak, vFiler, VFM, Virtual File Manager, VPolicy, WAFL, Web Filer, and XBB are trademarks or registered trademarks of NetApp, Inc. in the United States, other countries, or both.

IBM, the IBM logo, and [ibm.com](http://ibm.com) are trademarks or registered trademarks of International Business Machines Corporation in the United States, other countries, or both. A complete and current list of other IBM trademarks is available on the web at [www.ibm.com/legal/copytrade.shtml](http://www.ibm.com/legal/copytrade.shtml).

Apple is a registered trademark and QuickTime is a trademark of Apple, Inc. in the United States and/or other countries. Microsoft is a registered trademark and Windows Media is a trademark of Microsoft Corporation in the United States and/or other countries. RealAudio, RealNetworks, RealPlayer, RealSystem, RealText, and RealVideo are registered trademarks and RealMedia, RealProxy, and SureStream are trademarks of RealNetworks, Inc. in the United States and/or other countries.

All other brands or products are trademarks or registered trademarks of their respective holders and should be treated as such.

NetApp, Inc. is a licensee of the CompactFlash and CF Logo trademarks.

NetApp, Inc. NetCache is certified RealSystem compatible.

## How to send your comments

---

You can help us to improve the quality of our documentation by sending us your feedback.

Your feedback is important in helping us to provide the most accurate and high-quality information. If you have suggestions for improving this document, send us your comments by email to [doccomments@netapp.com](mailto:doccomments@netapp.com). To help us direct your comments to the correct division, include in the subject line the product name, version, and operating system.

You can also contact us in the following ways:

- NetApp, Inc., 495 East Java Drive, Sunnyvale, CA 94089 U.S.
- Telephone: +1 (408) 822-6000
- Fax: +1 (408) 822-4501
- Support telephone: +1 (888) 463-8277

# Index

## 7-Mode environments

identifying information [11](#)

## A

### access permissions

overview [52](#)

### Add Alarm wizard

task [108](#)

### administrator roles

Performance Advisor tasks requirements [10](#)

### advanced views

creating [75](#)

what they are [70](#)

### alarms

adding [108](#)

deleting [109](#)

disabling [107](#)

enabling [107](#)

modifying [106](#)

monitoring [105](#)

monitoring and managing tasks for [105](#)

pausing [107](#)

RBAC for configuring [56](#)

responding to [109](#)

testing [107](#)

viewing [105](#)

### analysis

real-time data [81](#)

### applications in NetApp Management Console [20](#)

### asup

### authentication

Performance Advisor [9](#)

## C

### canned views

*See* predefined views

### charts

bar chart [73](#)

changing the time period [74](#)

changing the type [76](#)

printing from a view [77](#)

resetting axes [74](#)

saving [81](#)

### client platforms [20](#)

### closing

a performance view [73](#)

### clustered environments

identifying information [11](#)

### clusters

predefined views [98](#)

### configuration

copying data collection details [112](#)

data collection [112](#)

### console

adjusting column widths [22](#)

applications and capabilities supported [20](#)

applications, toggling [21](#)

filtering data display [23](#)

Get Started feature [21](#)

Help, accessing [21](#)

logging out [21](#)

moving backward and forward [21](#)

rearranging column order [22](#)

selecting columns to display [22](#)

Tasks bar, hiding and redisplaying [22](#)

### counters

about [27](#)

definitions, performance [28](#)

shared across views [78](#)

### custom views

creating [79](#)

deleting [80](#)

described [69](#)

editing [80](#)

opening [79](#)

performance monitoring [78](#)

RBAC for configuring [52](#)

when to create [78](#)

## D

### dashboard panels

described [64](#)

### dashboards

panels, descriptions of [64](#)

### dashboards, performance

descriptions of panels [64](#)

### data

historical [71](#)

- real-time [71](#)
- data collection
  - configuration [112](#)
  - copying configuration [112](#)
  - pausing [76](#)
- DataFabric Manager
  - client platform for [20](#)
- default views [69](#)
- documentation
  - identifying mode information [11](#)

## E

- editing
  - host credentials [111](#)
- events
  - definition of [65](#)
  - deleting from event log [67](#)
  - how to know when events occur [65](#)
  - RBAC for configuring [56](#)
  - responding when an event occurs [67](#)
  - viewing the list of [66](#)

## F

- filtering data display [23](#)

## G

- Get Started feature [21](#)
- groups
  - predefined view [83](#)

## H

- Help
  - accessing [21](#)
- hierarchical groups
  - support for [9](#)
- historical data
  - described [71](#)
  - viewing [72](#)
- host credentials
  - editing in 7-Mode environments [111](#)
  - editing in clustered environments [111](#)
- host table
  - field descriptions [110](#)

## L

- logging out [21](#)
- logs
  - for viewing the events list [66](#)

## M

- managing
  - alarms [105](#)
- monitoring
  - alarms [105](#)
  - dashboard panel, [64](#)
  - dashboard panels, overview of [64](#)
  - events [66](#)

## N

- NetApp Management Console
  - about [20](#)
  - applications supported [20](#)
  - defined [20](#)
  - See also* console
- network interfaces
  - predefined views of [91](#)
- nodes
  - predefined views [101](#)

## P

- Performance Advisor
  - accessing [61](#)
  - application described [20](#)
  - CLI commands for configuration [49](#)
  - definition [8](#)
  - disconnecting [61](#)
  - displaying hosts in [110](#)
  - limitations [9](#)
  - logging in to [9](#)
  - network topology location [8](#)
  - requirement for installing [58](#)
  - starting [61](#)
- performance counters
  - definitions [28](#)
- Performance dashboard [64](#)
- performance data
  - exporting to .csv file [82](#)
  - limitations, exporting [82](#)
  - methods for saving [81](#)
- performance issues

- diagnosing [77](#)
- performance objects
  - about [25](#)
  - list for clustered environments [26](#)
  - list of 7-Mode [25](#)
- performance views
  - closing [73](#)
  - working with data in [73](#)
- performance-monitoring server
  - enabling [58](#)
  - network topology location [8](#)
- predefined views
  - cluster [98](#)
  - for Vservers [99](#)
  - global [83](#)
  - group [83](#)
  - network interfaces [91](#)
  - node [101](#)
  - storage systems [85](#)
  - target data [98](#)
  - vFiler units [90](#)
- protocols, transport
  - setting up [58](#)
  - setting up for the storage objects [59](#)
  - setting up, between Performance Advisor and monitored devices [60](#)

## R

- RBAC
  - for configuring alarms [56](#)
  - for configuring custom views [52](#)
  - for configuring events [56](#)
  - for configuring threshold templates [55](#)
  - for modifying storage system settings [52](#)
  - for setting thresholds [53](#)
- real-time data
  - analysis [81](#)
  - described [71](#)
  - viewing [78](#)
- regular expressions, filtering examples [23](#)
- retention period
  - setting [113](#)

## S

- sample buffers
  - setting [113](#)
- sample rates
  - effect of increasing [112](#)

- setting [113](#)
- secure connections
  - support for [9](#)
- SSL
  - certificate for [9](#)
- storage systems
  - CPU utilization [81](#)
  - CPU utilization limitations [9](#)
  - display of newly added objects [63](#)
  - RBAC for modifying settings [52](#)
  - unavailable in Performance Advisor [61](#)
- synchronize
  - charts across all views [74](#)
  - charts in a view [74](#)
  - undo [75](#)

## T

- tasks and information
  - 7-Mode, list of [11](#)
  - clustered environment, list of [15](#)
- tasks bar, hiding and redisplaying [22](#)
- threshold templates
  - described [117](#)
  - RBAC for configuring [55](#)
  - when to use [117](#)
- thresholds
  - add [76](#)
  - adding [115](#), [118](#)
  - definition [113](#)
  - deleting [117](#)
  - editing [115](#)
  - editing templates [118](#)
  - RBAC for configuring templates [55](#)
  - RBAC for setting [53](#)
  - view [75](#)
  - working with [113](#)
- Thresholds
  - adding alarms [106](#)
  - Details tab [115](#)
  - editing [116](#)

## U

- unavailable menu options [62](#)

## V

- vFiler units
  - support for [10](#)

views

- advanced [70](#)
- aggregates [97](#)
- at the processor level [91](#)
- blank charts [62](#)
- cluster [98](#)
- custom [69](#)
- disks [97](#)
- global [83](#)
- group [83](#)
- how to select [73](#)
- legends for [75](#)
- logical and physical objects [71](#)
- LUNs [96](#)
- navigation [71](#)
- network interfaces [91](#)

- node [101](#)
- of datasets [92](#)
- predefined [69, 82](#)
- qtree [95](#)
- resource pools [92](#)
- storage systems [85](#)
- target data [98](#)
- vFiler units [90](#)
- volumes [93](#)
- Vservers [99](#)

**Z**

- zero-value data
  - display of [62](#)